 


 
 
FIG. 1

FIG. 2

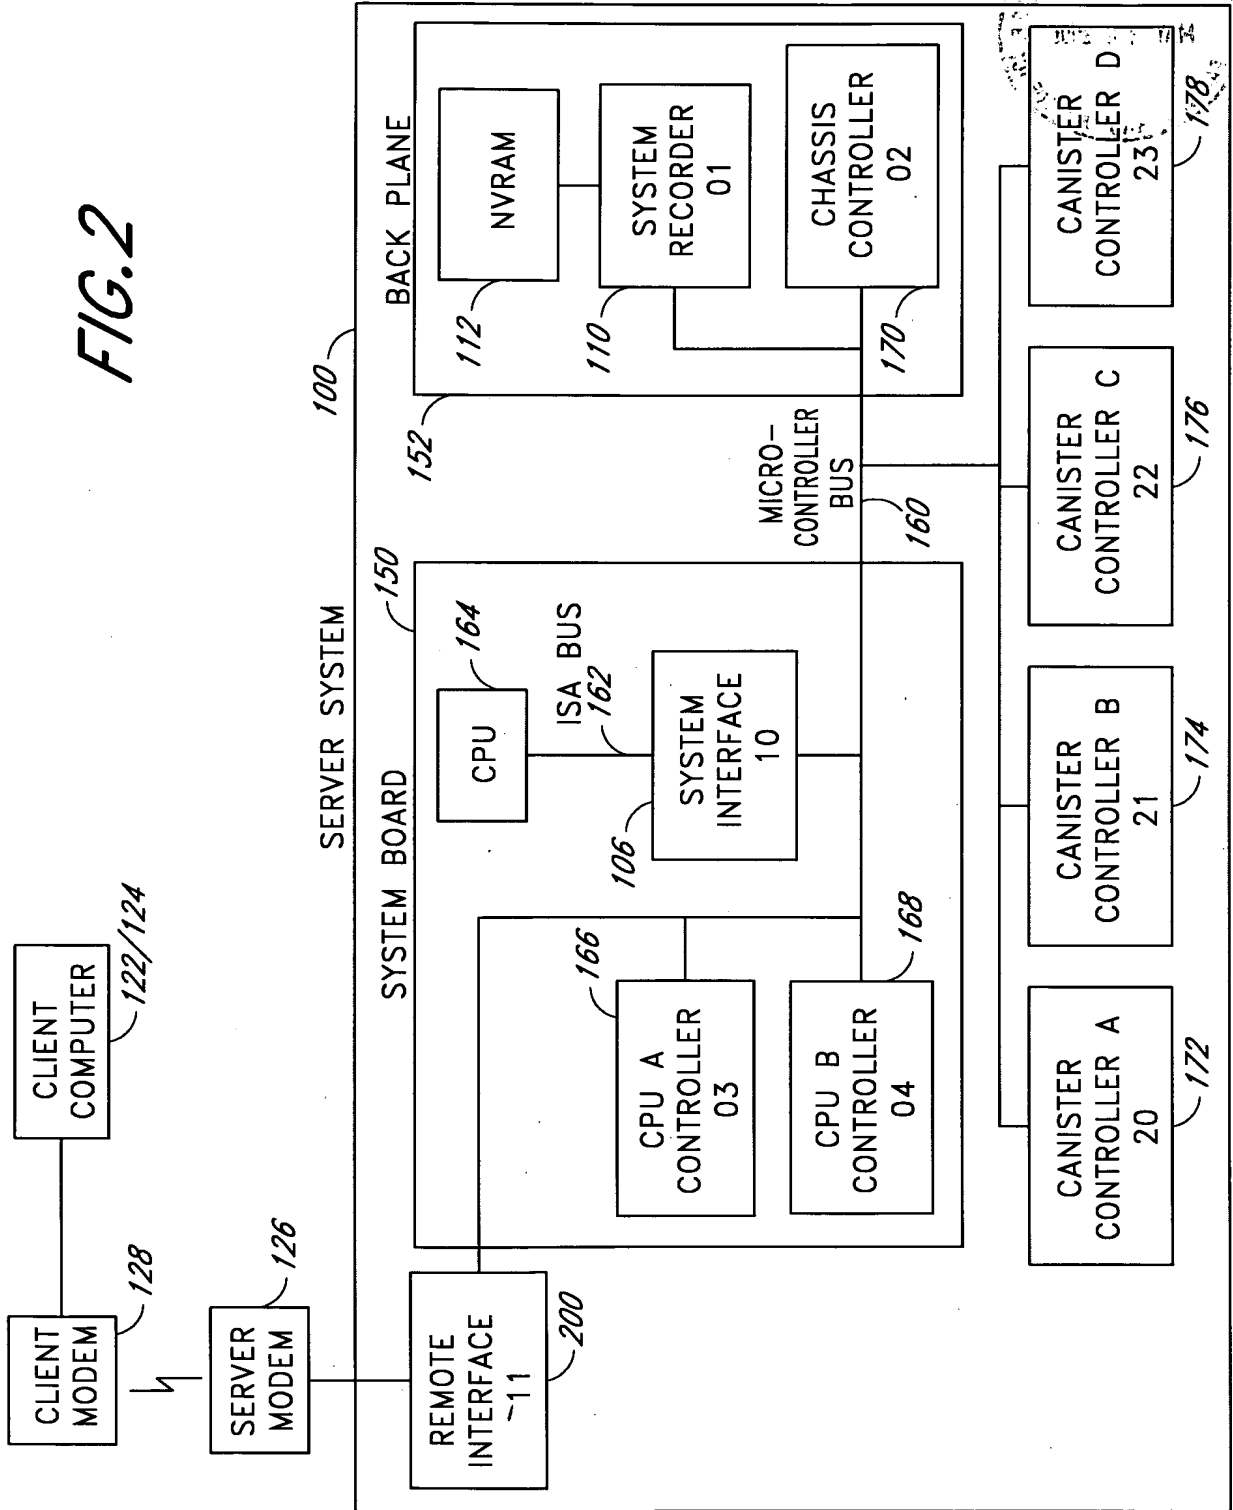

08/942,347

# REMOTE INTERFACE SERIAL PROTOCOL MESSAGE FORMATS

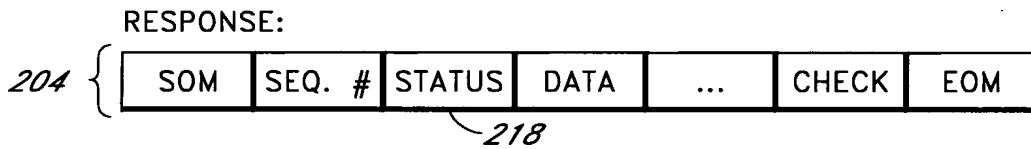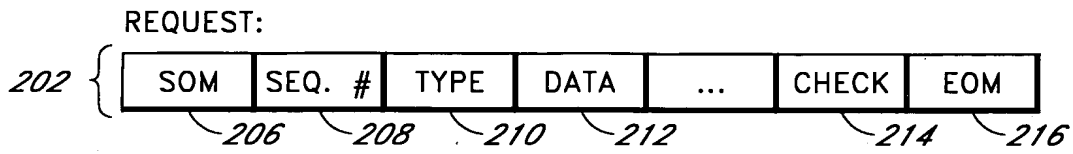

RESPONSE:

 
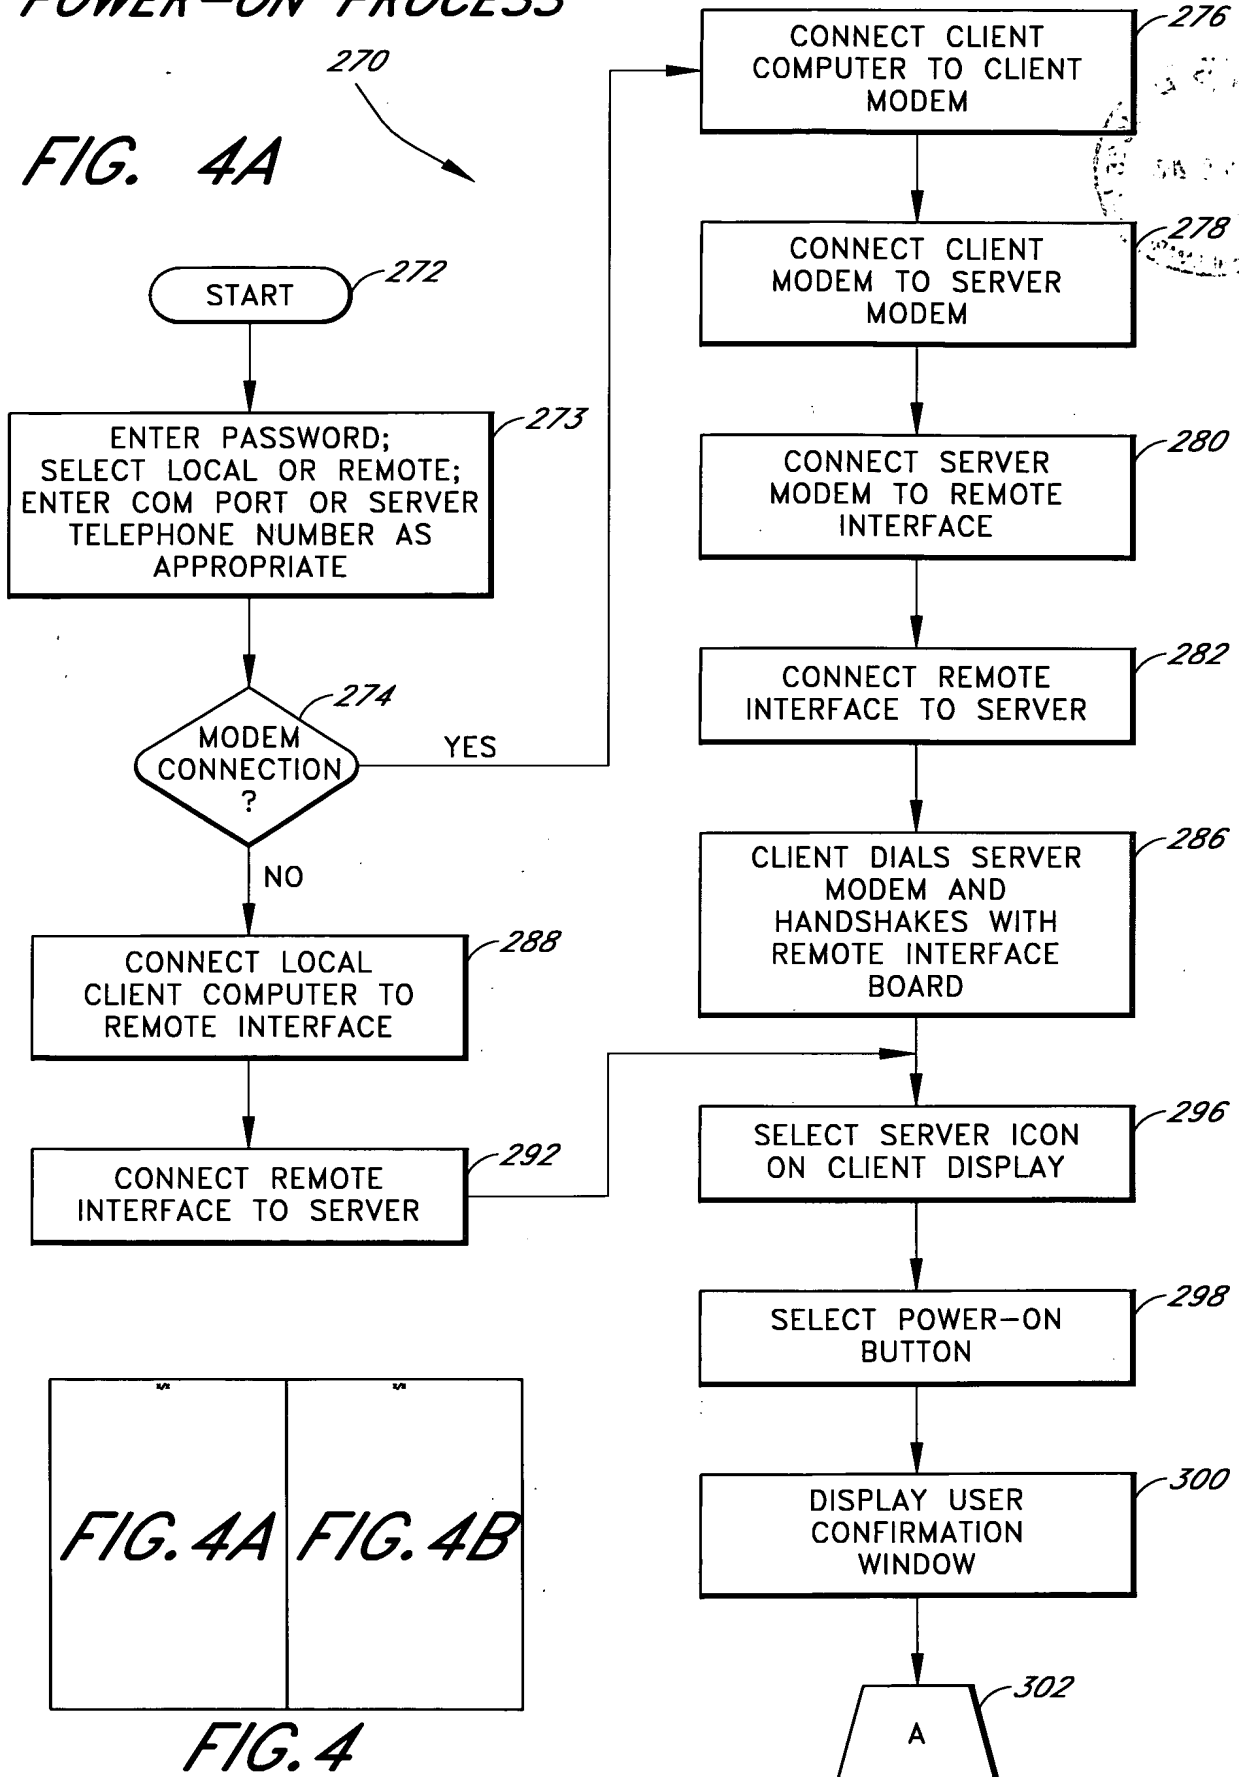 


FIG. 3

## POWER-ON PROCESS

FIG. 4A



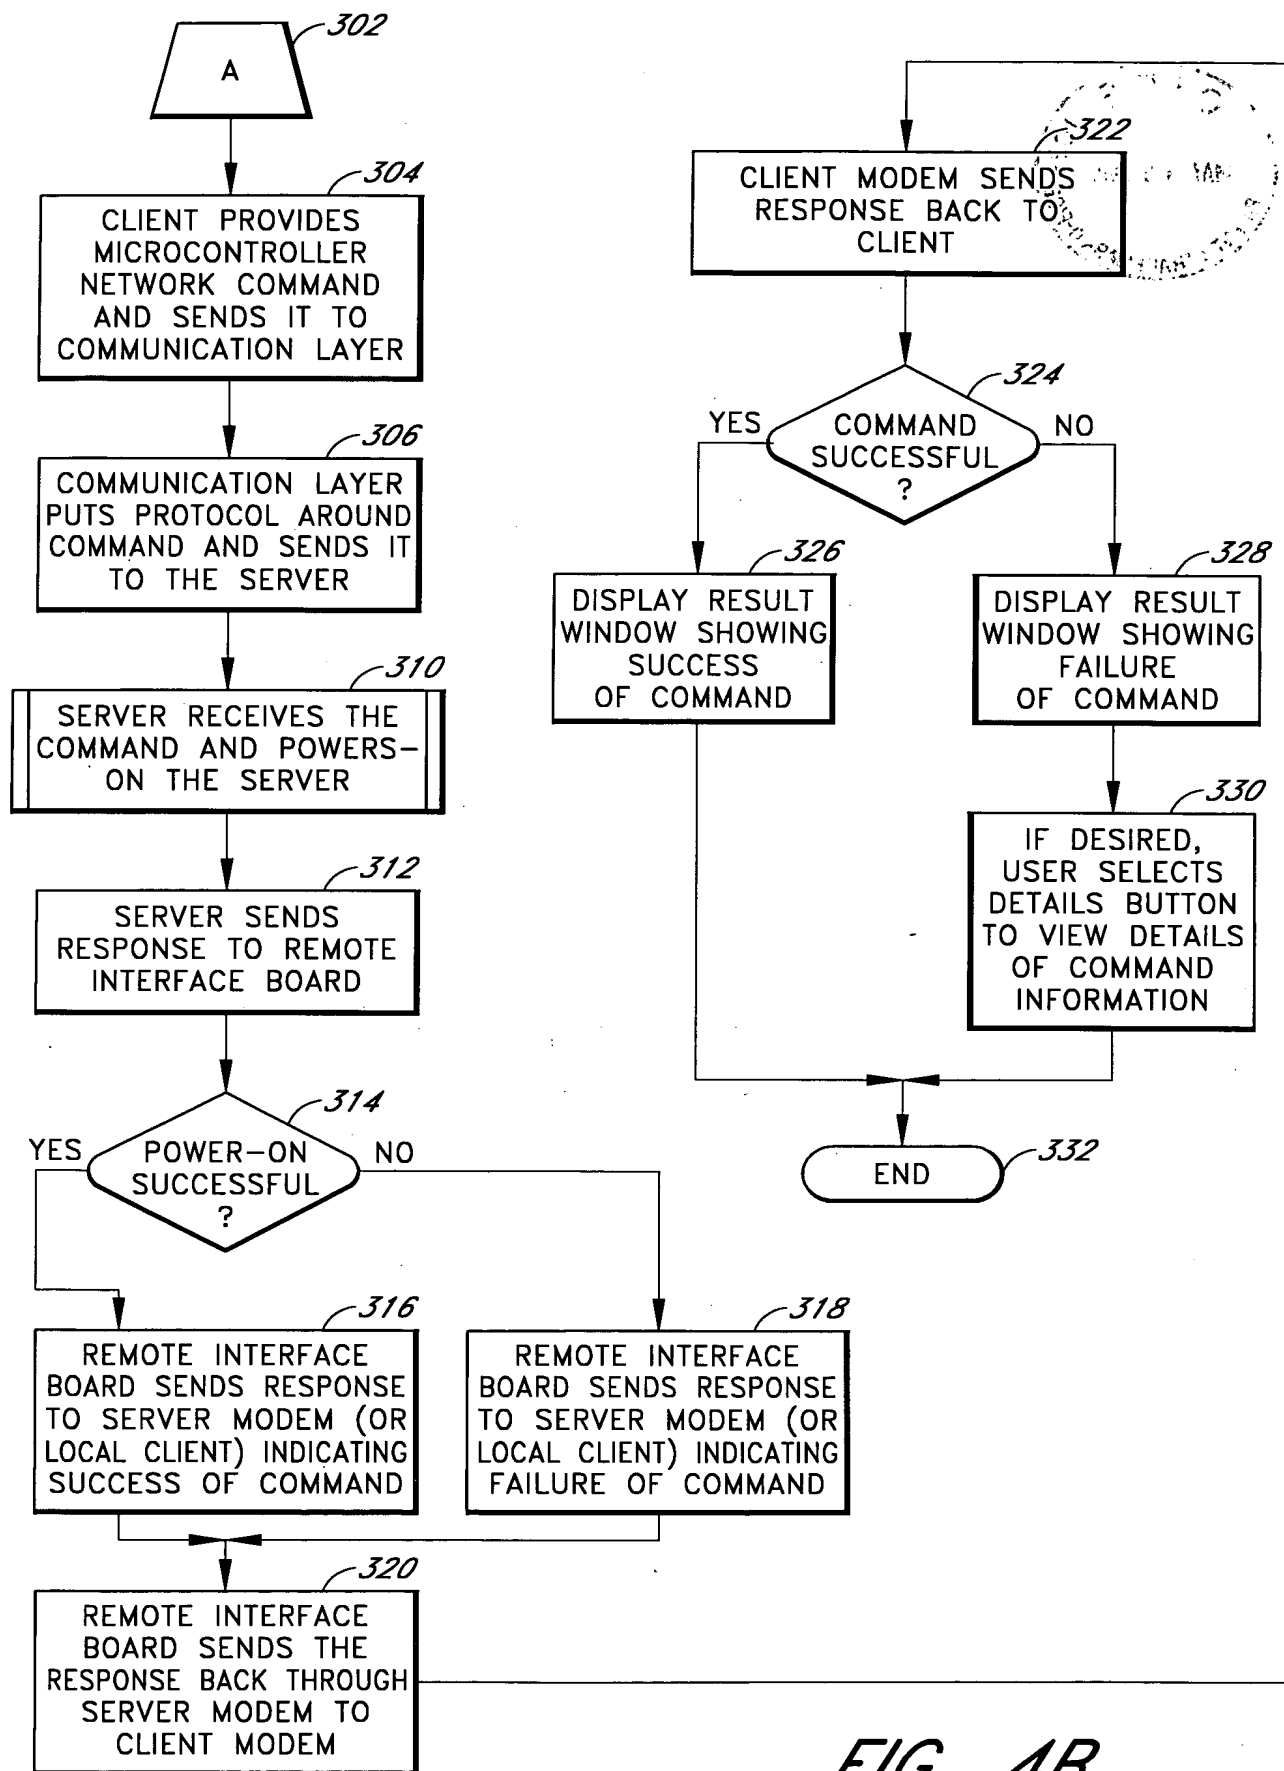 


FIG. 4B

08/942,347

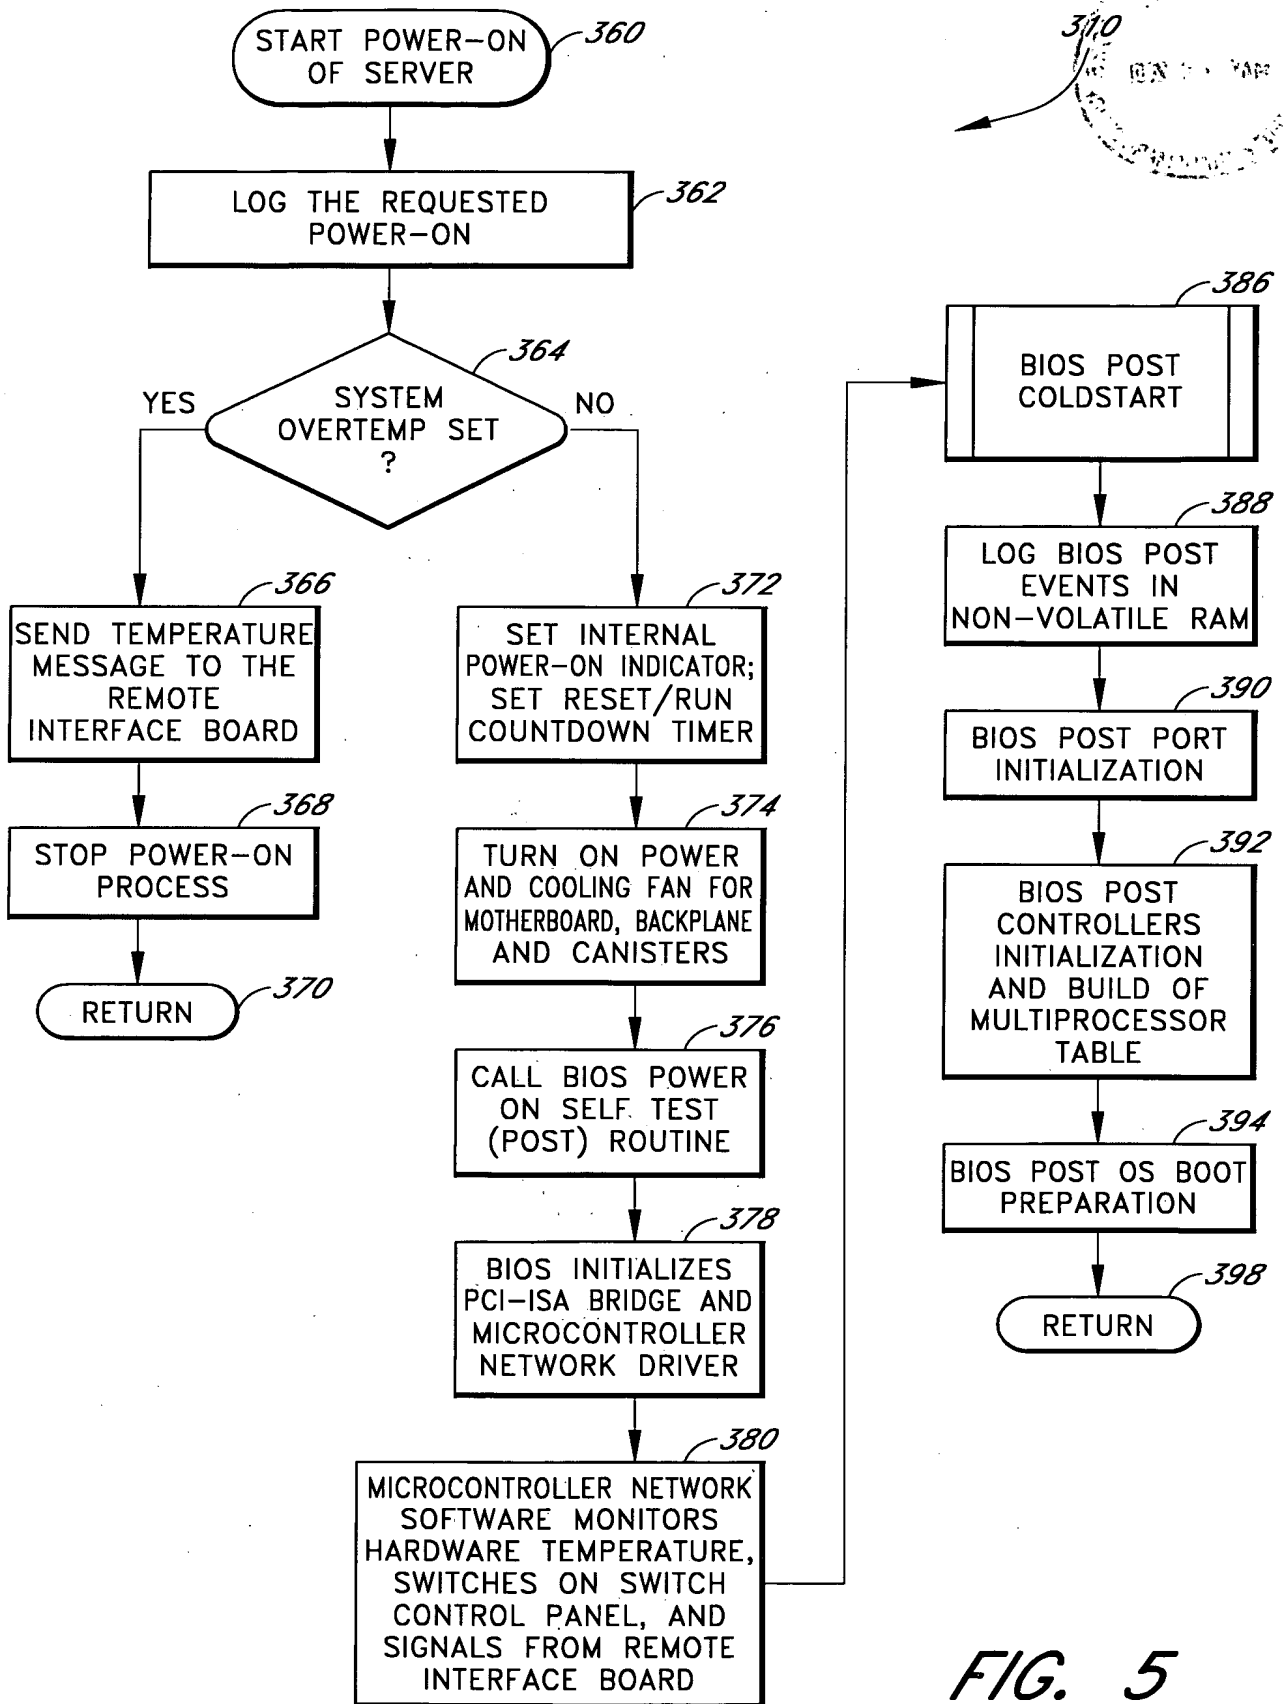 


FIG. 5

# POWER-OFF PROCESS

FIG. 6A

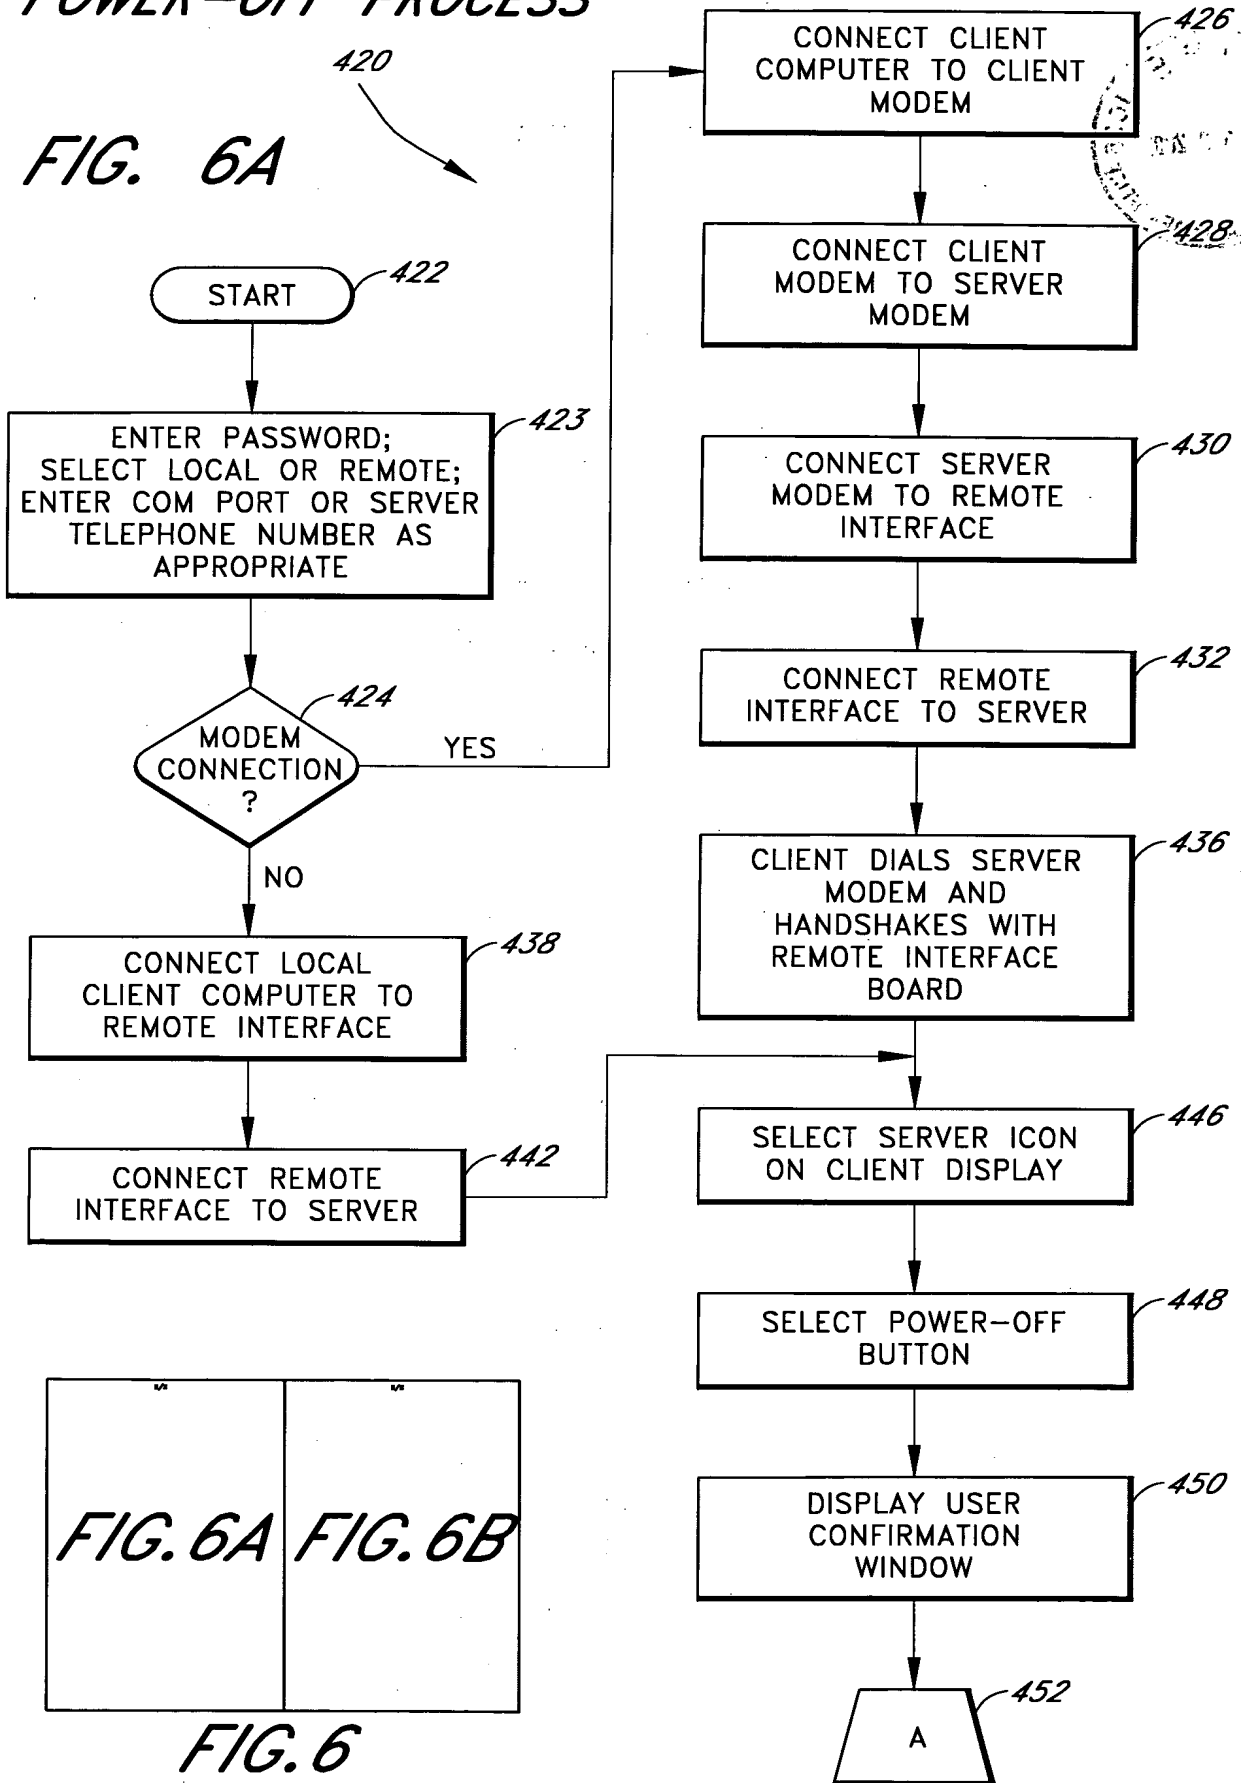 


FIG. 6A FIG. 6B

FIG. 6

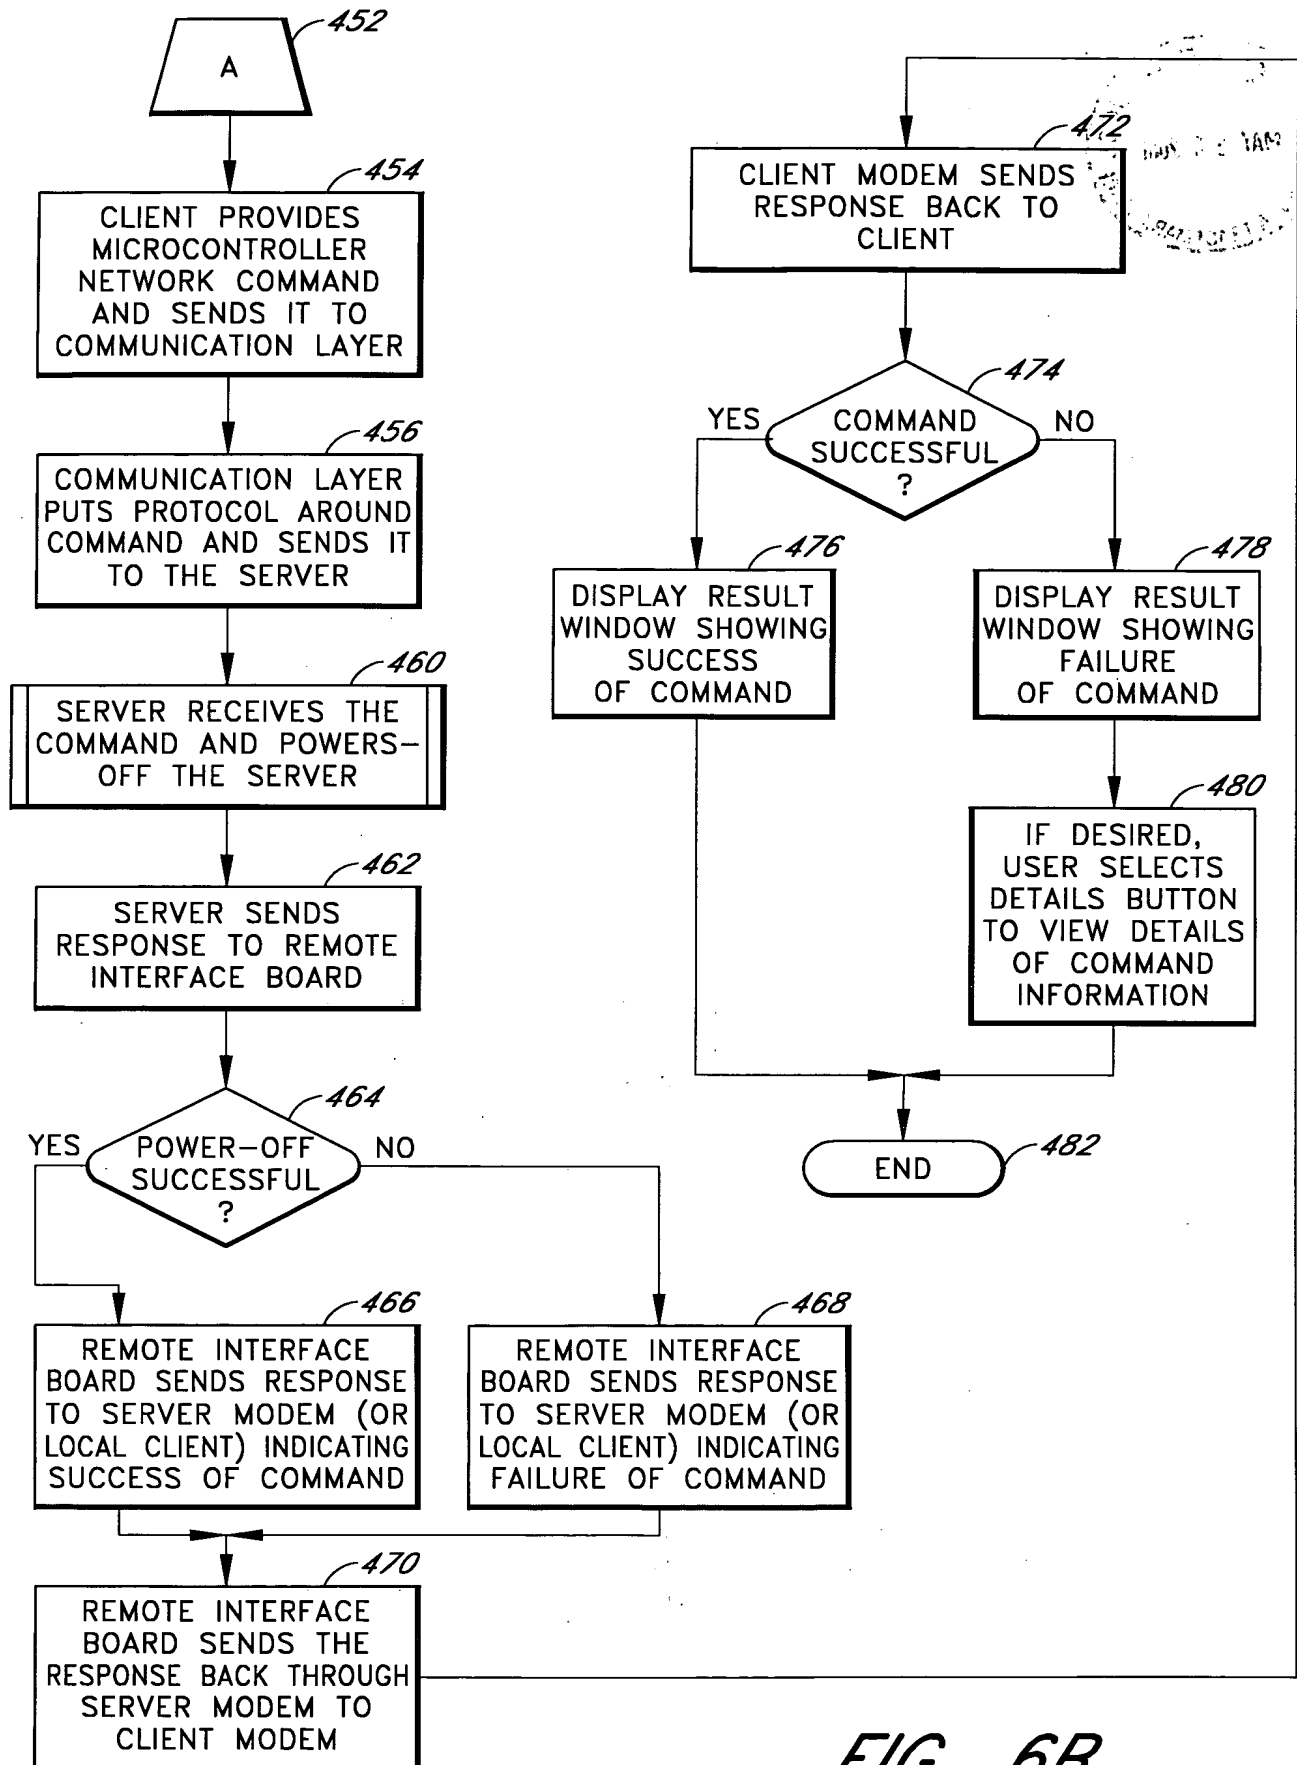 


FIG. 6B



08/942,347

 
 
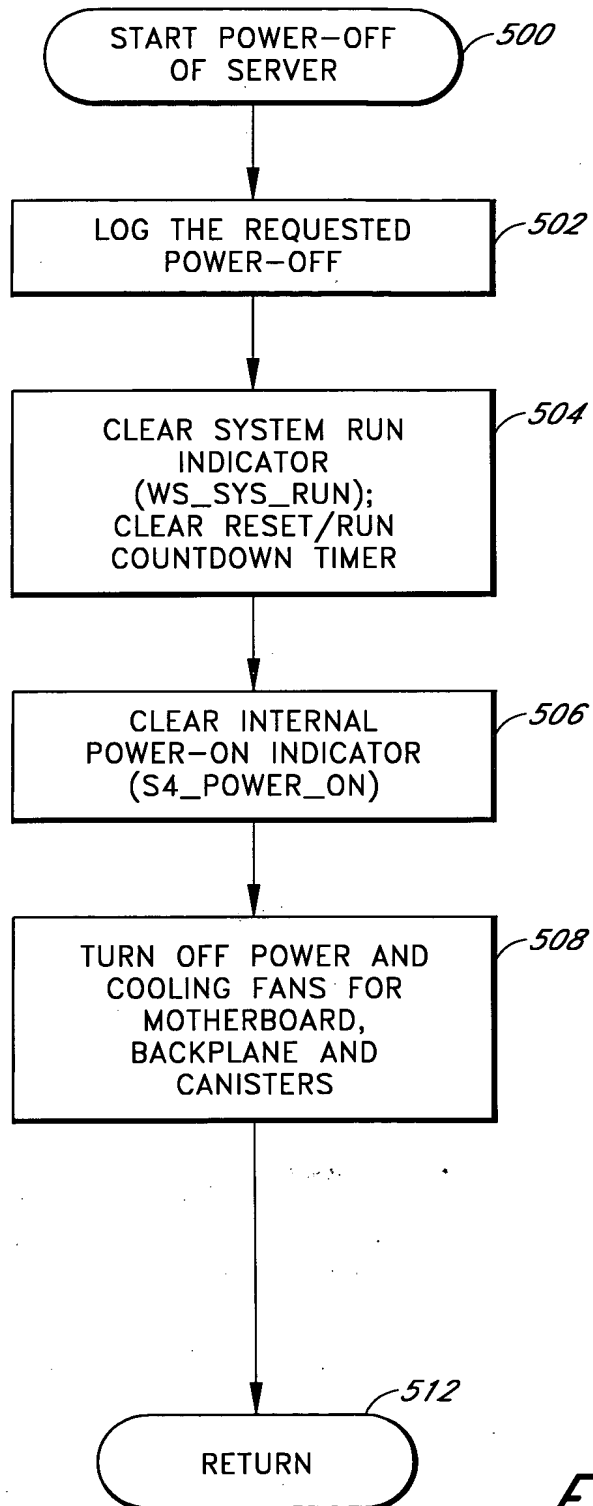 


FIG. 7

## RESET PROCESS

FIG. 8A

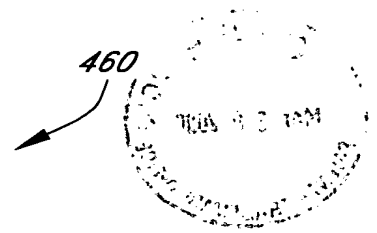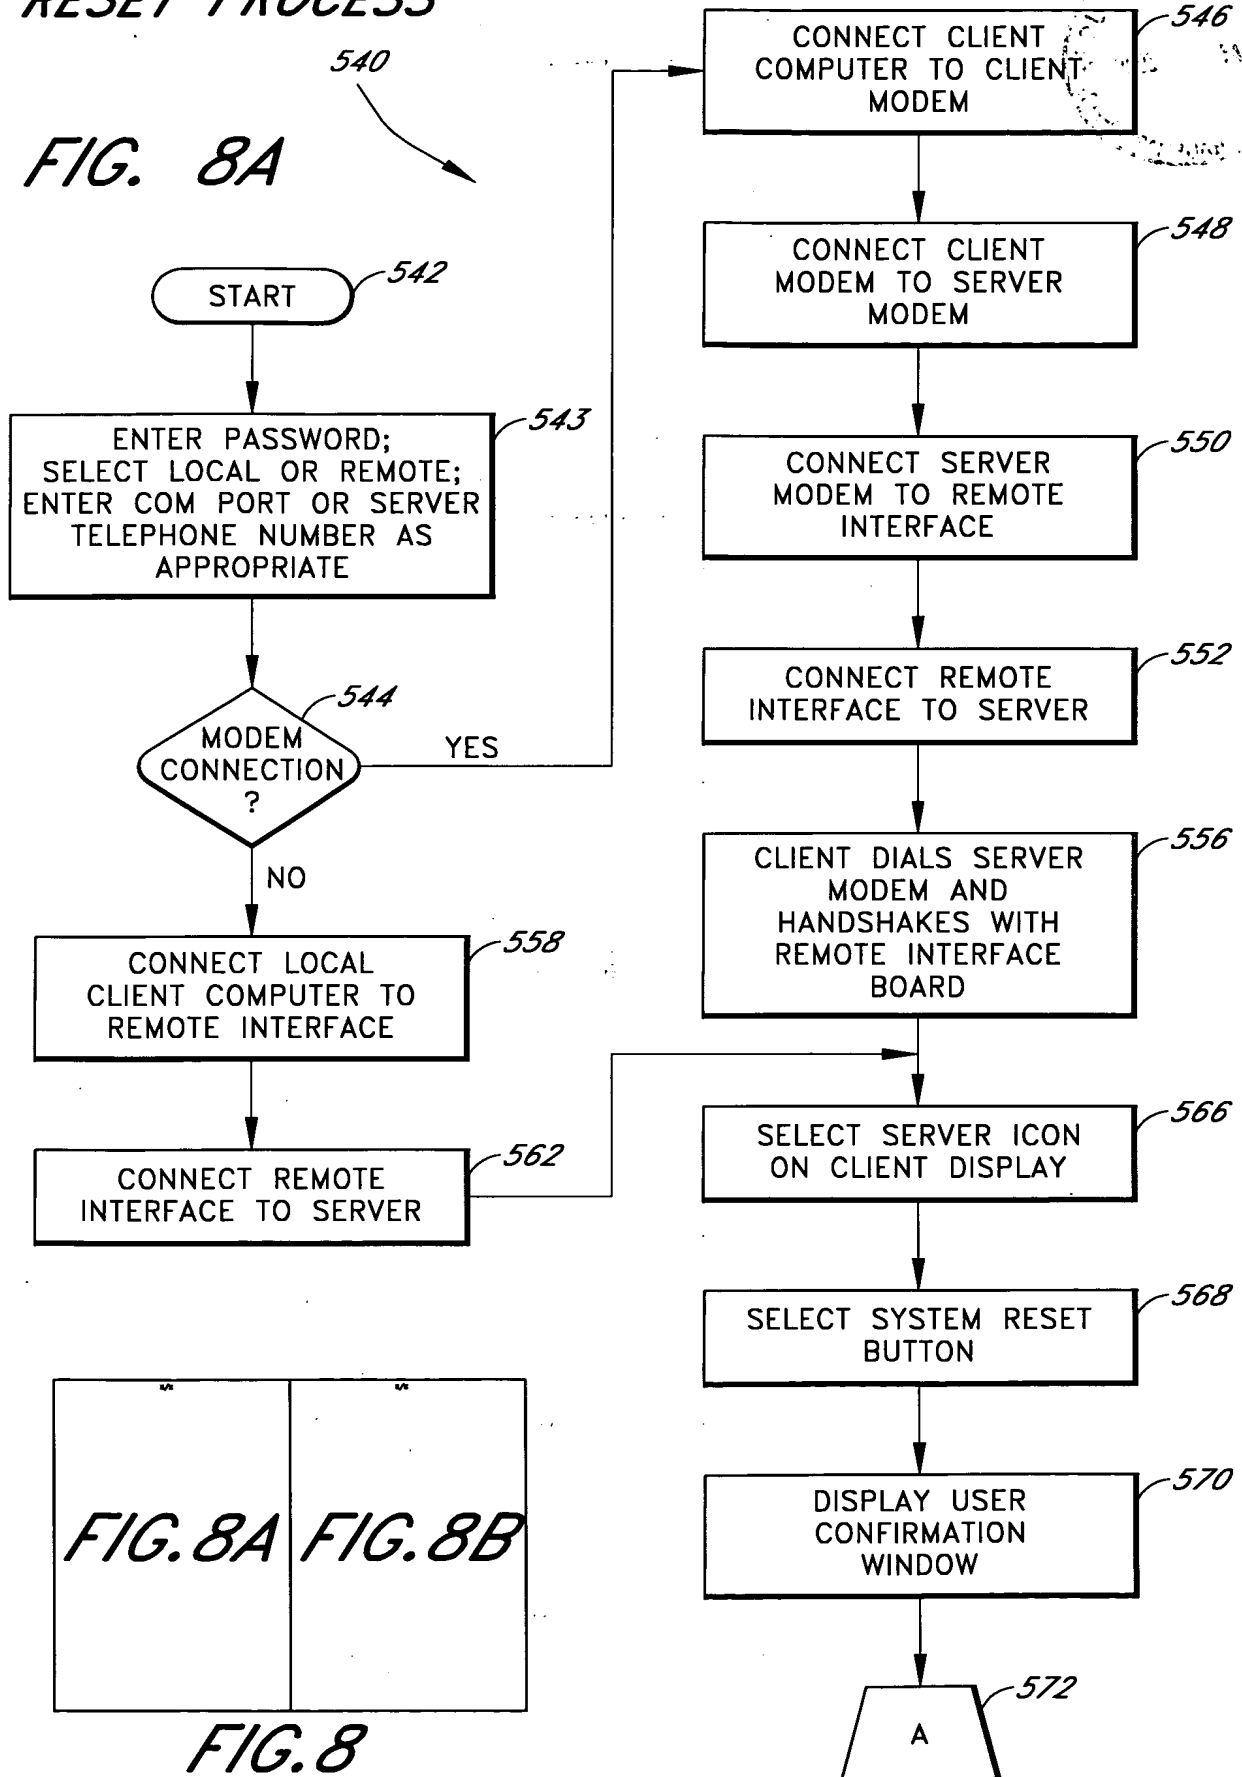

08/942,347

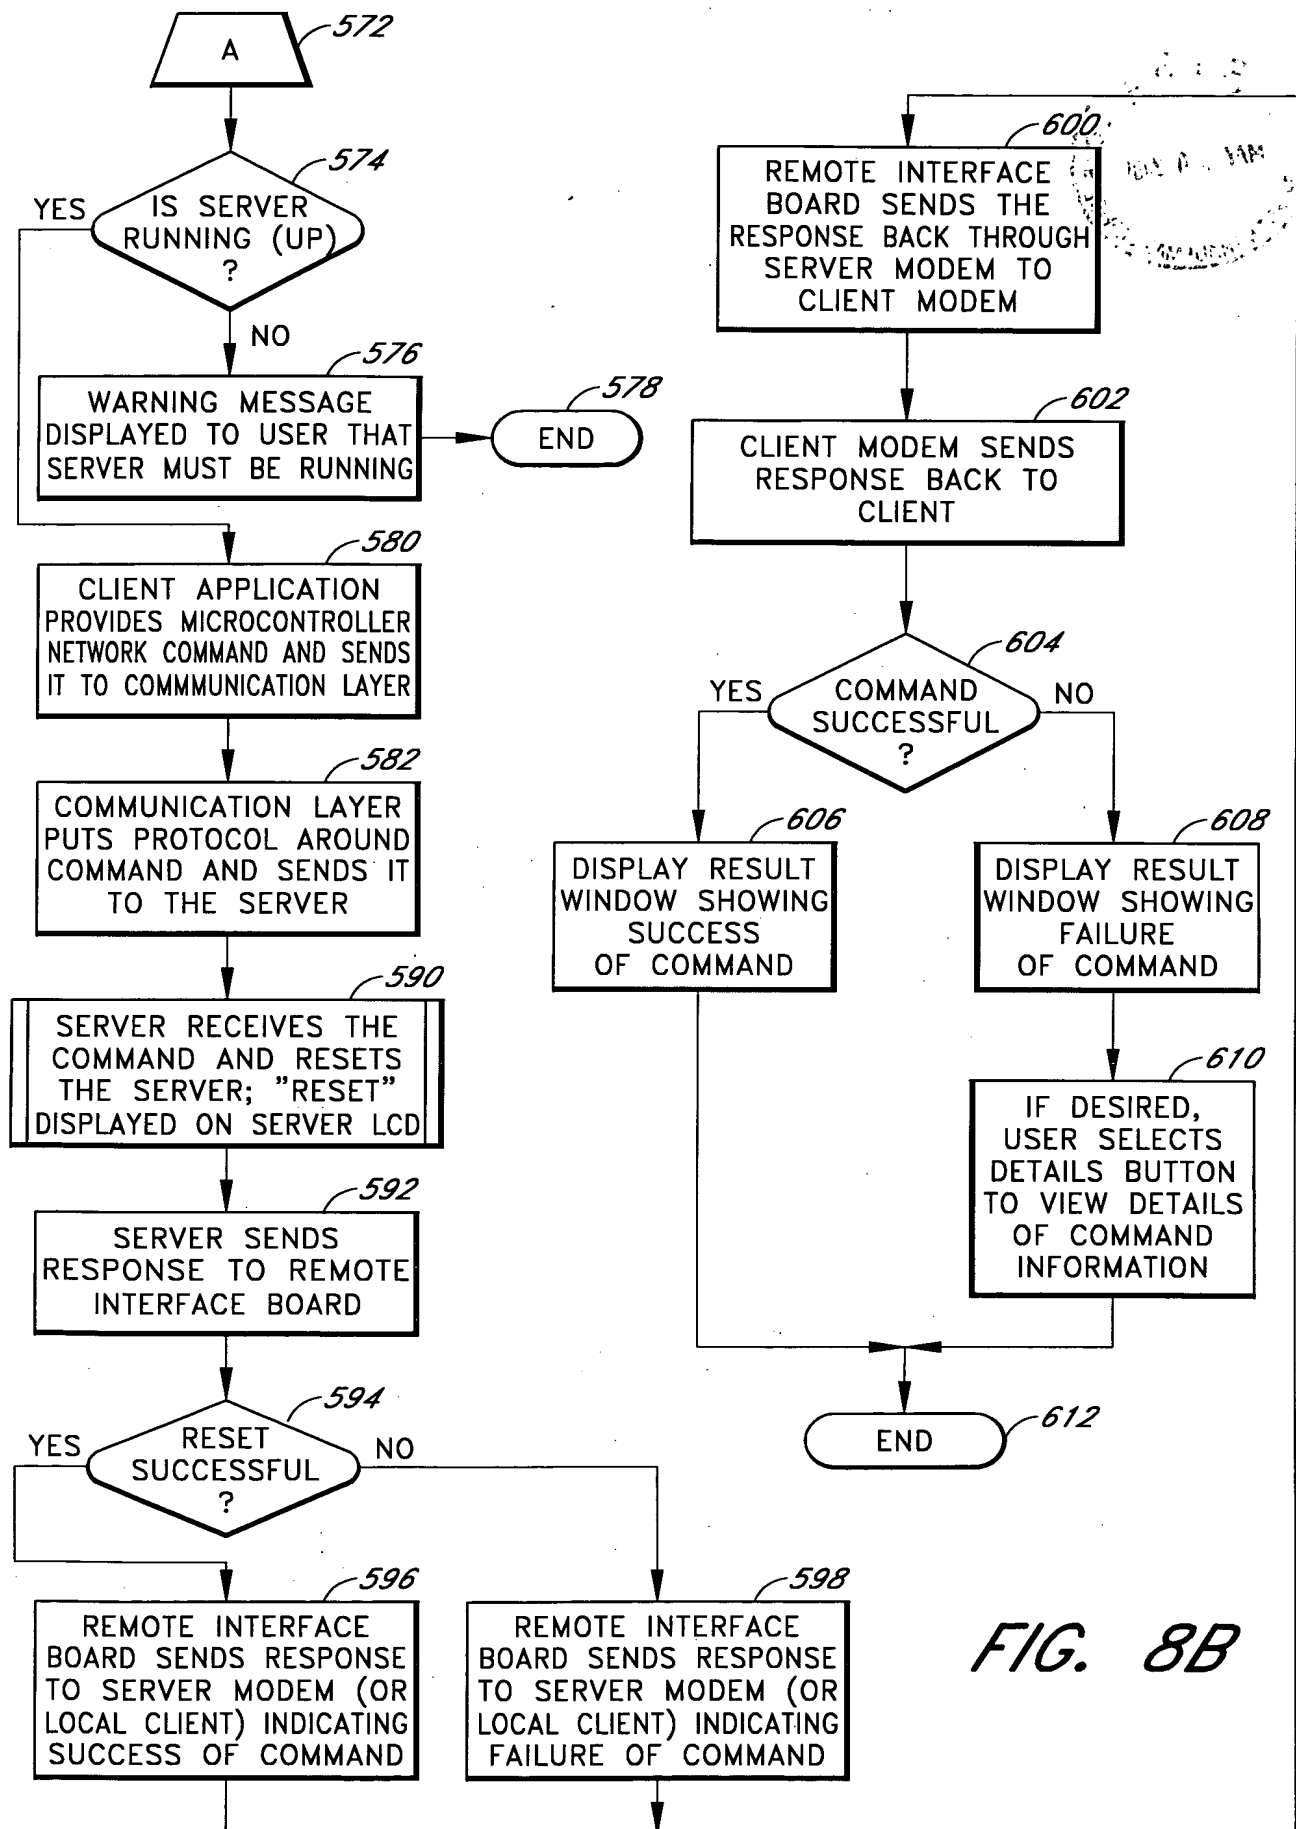 


FIG. 8B

08/942,347

 
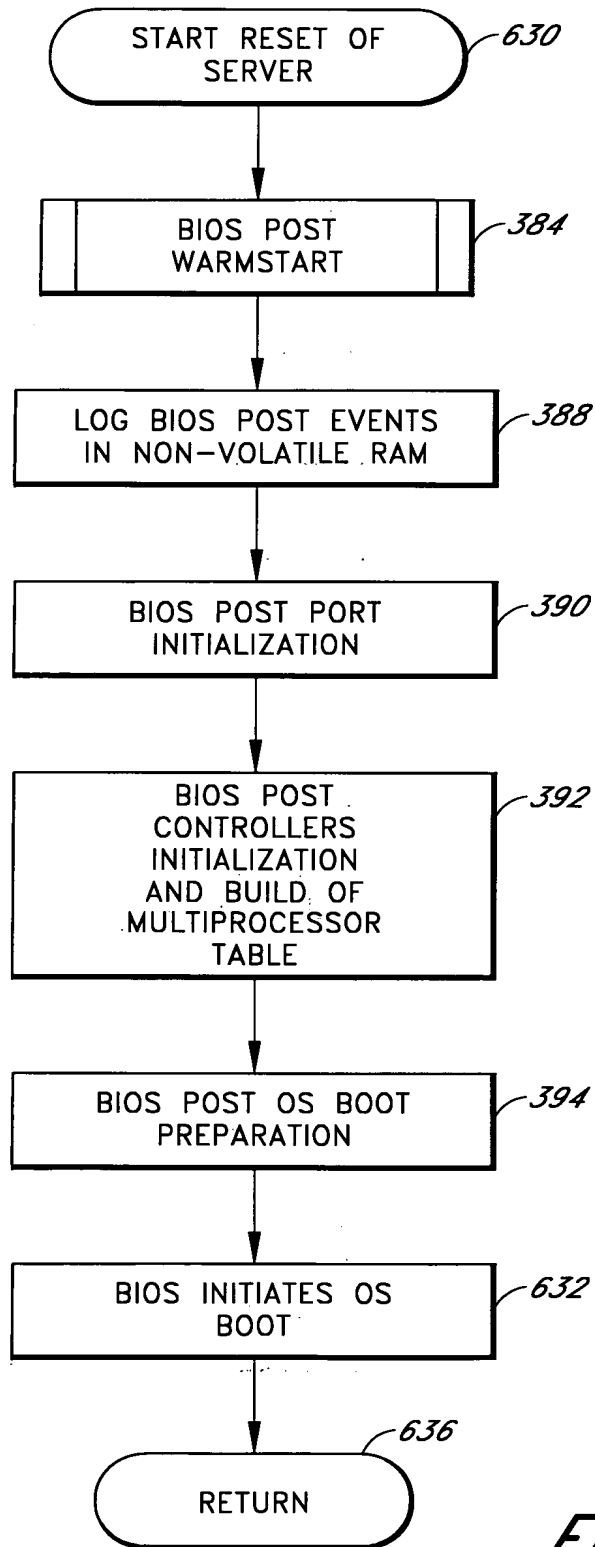 


FIG. 9

# DISPLAYING FLIGHT RECORDER PROCESS

## FIG. 10A

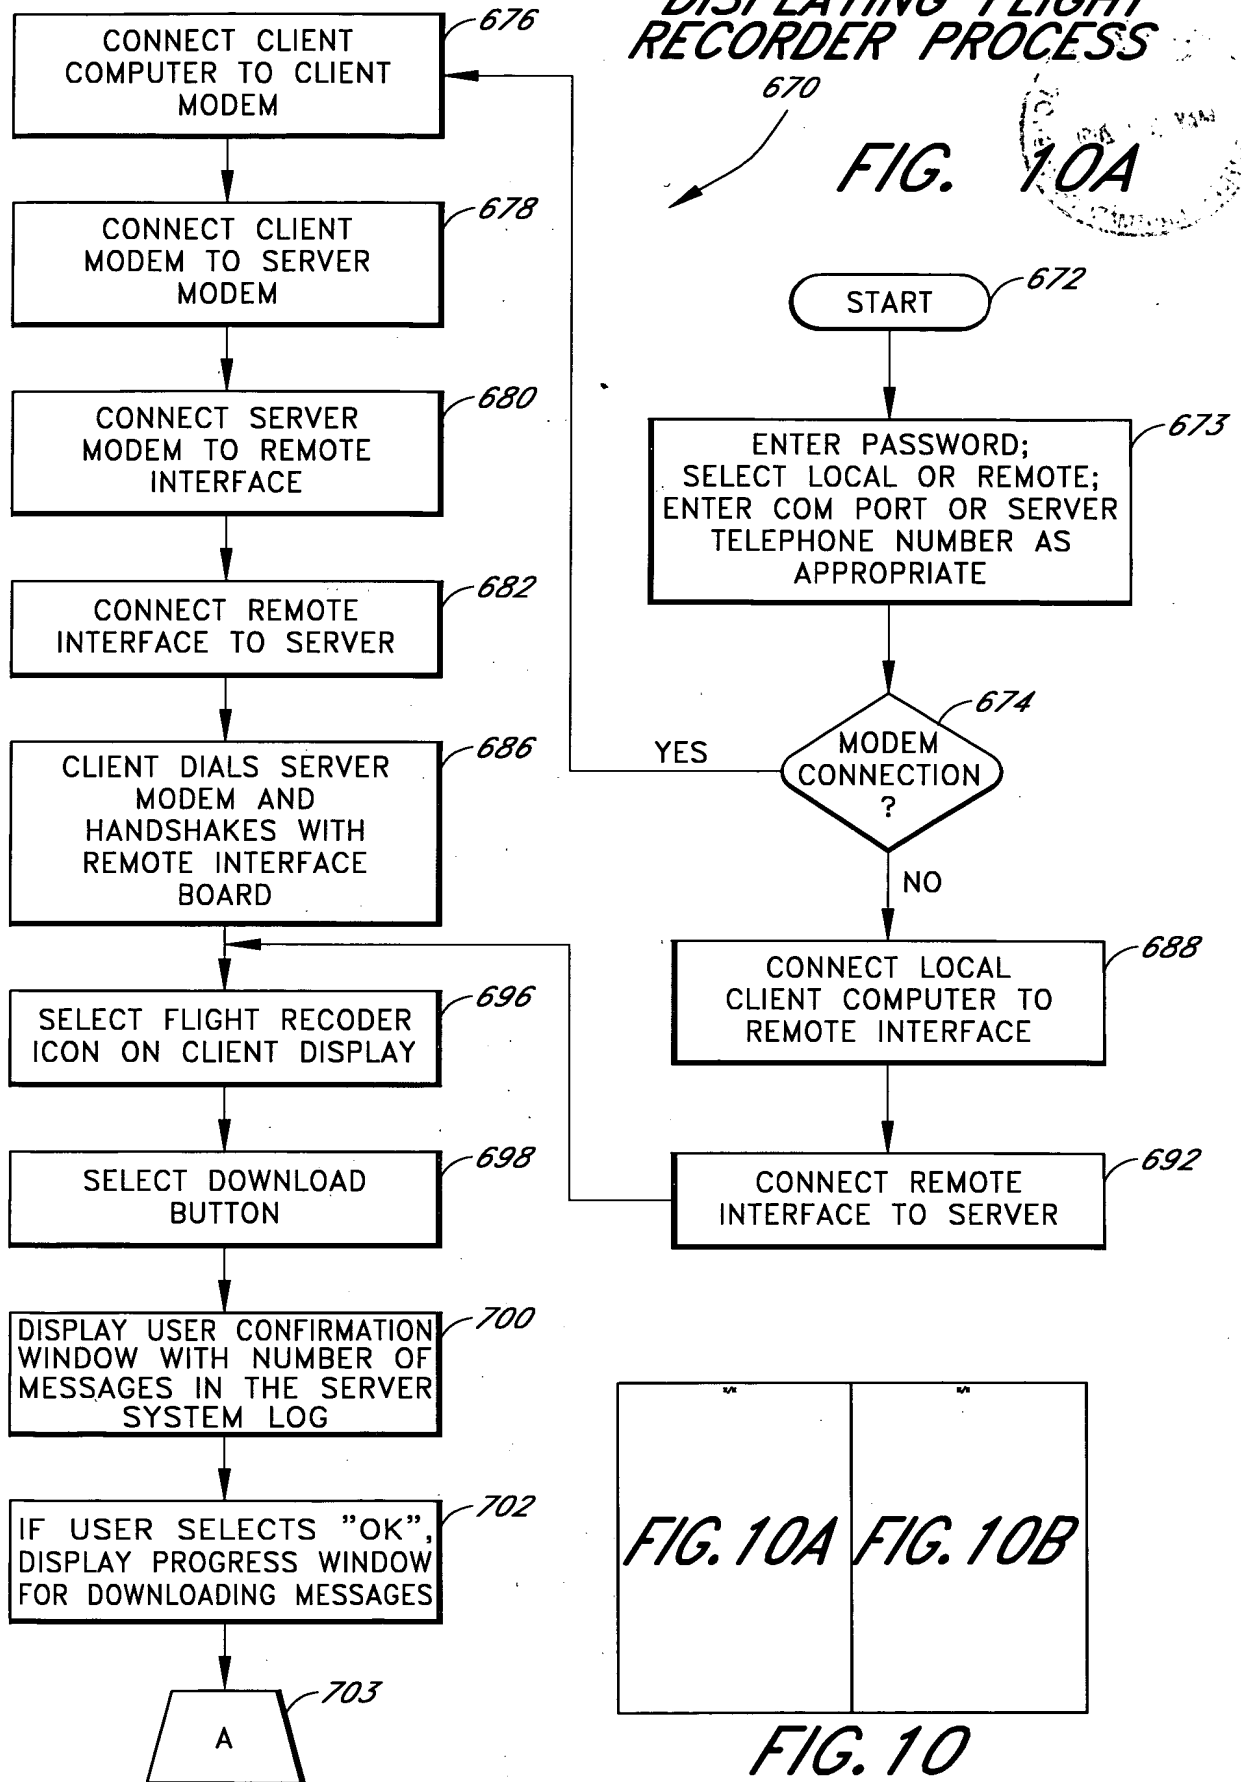

08/942,347

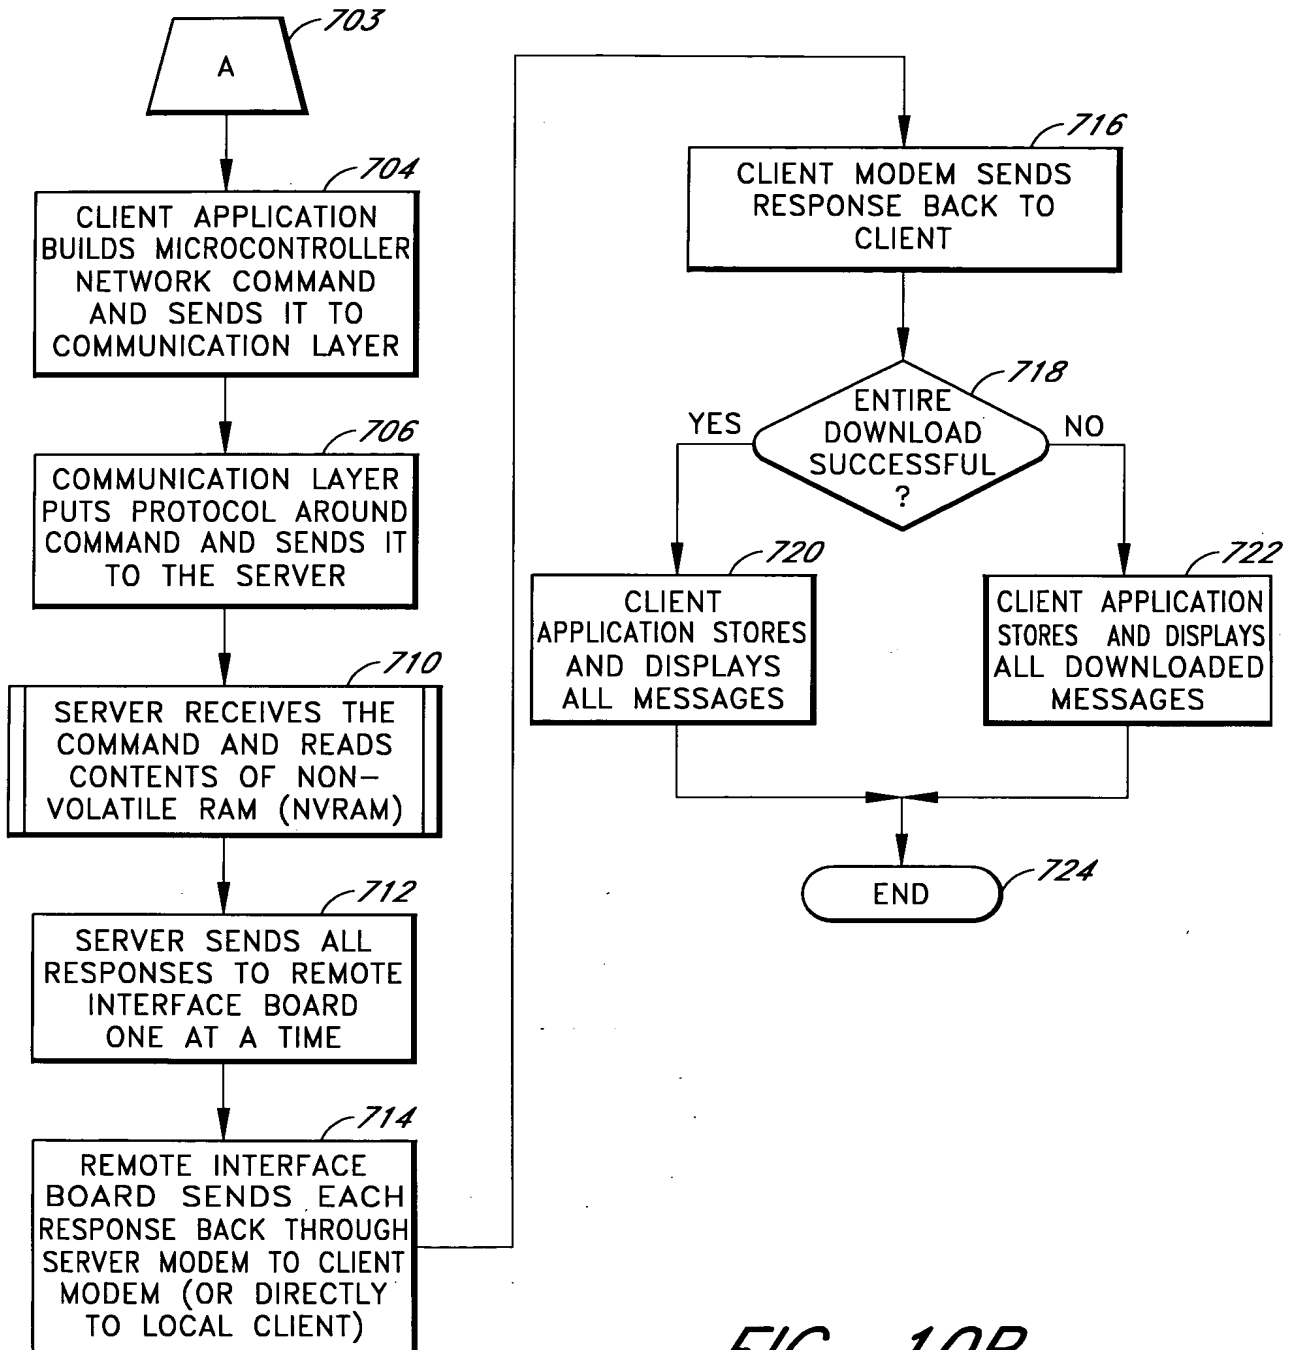 


FIG. 10B

08/942,347

 
 
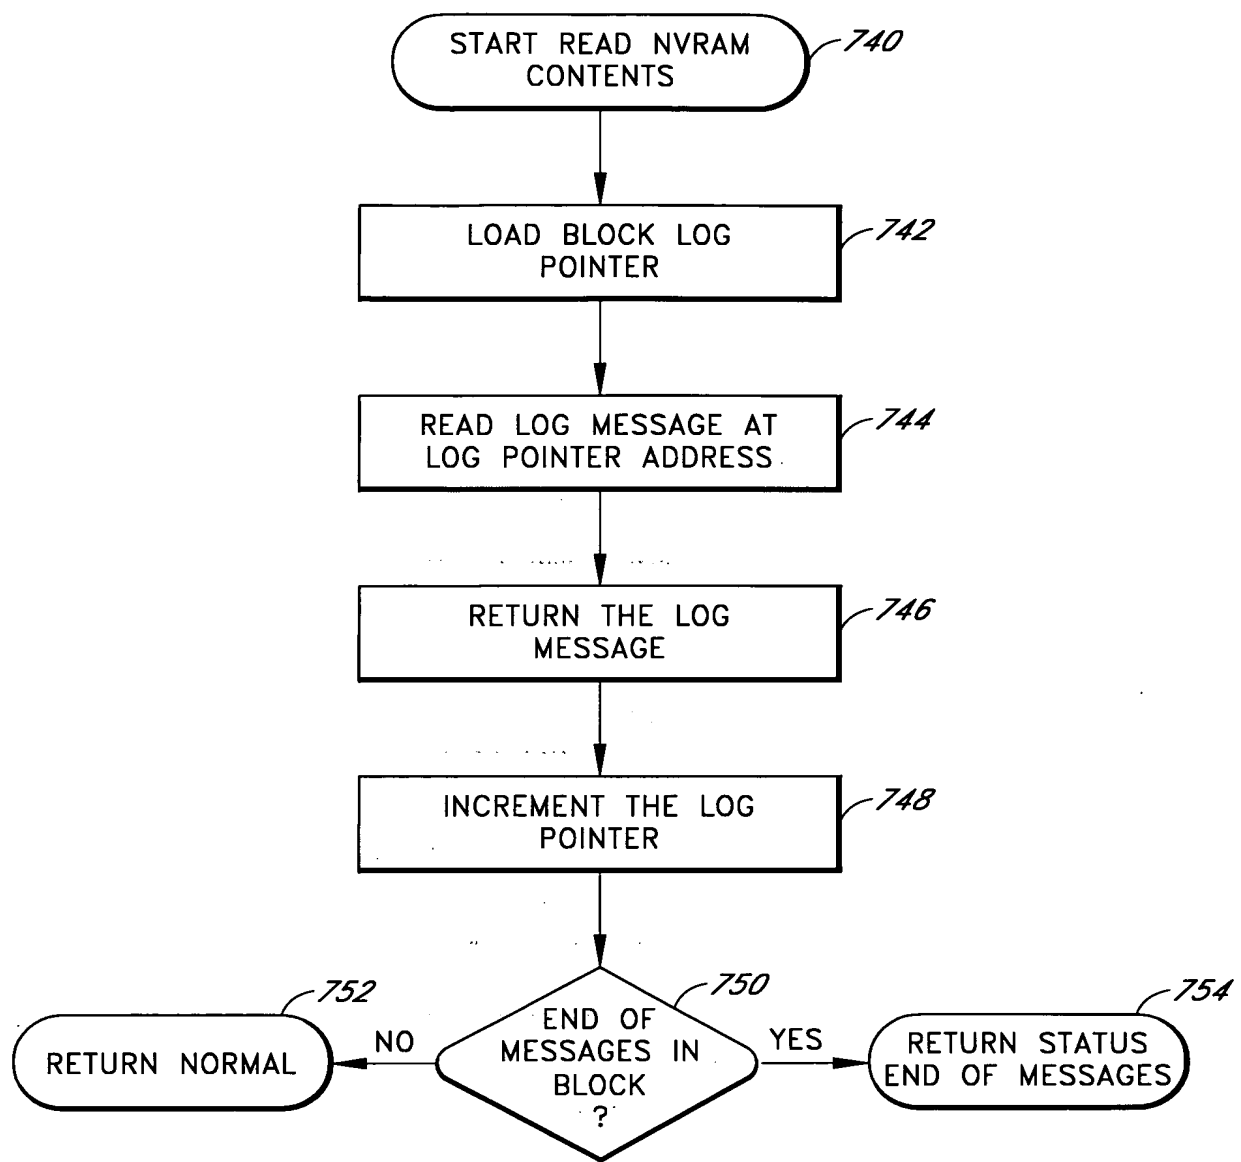 


FIG. 11

08/942,347



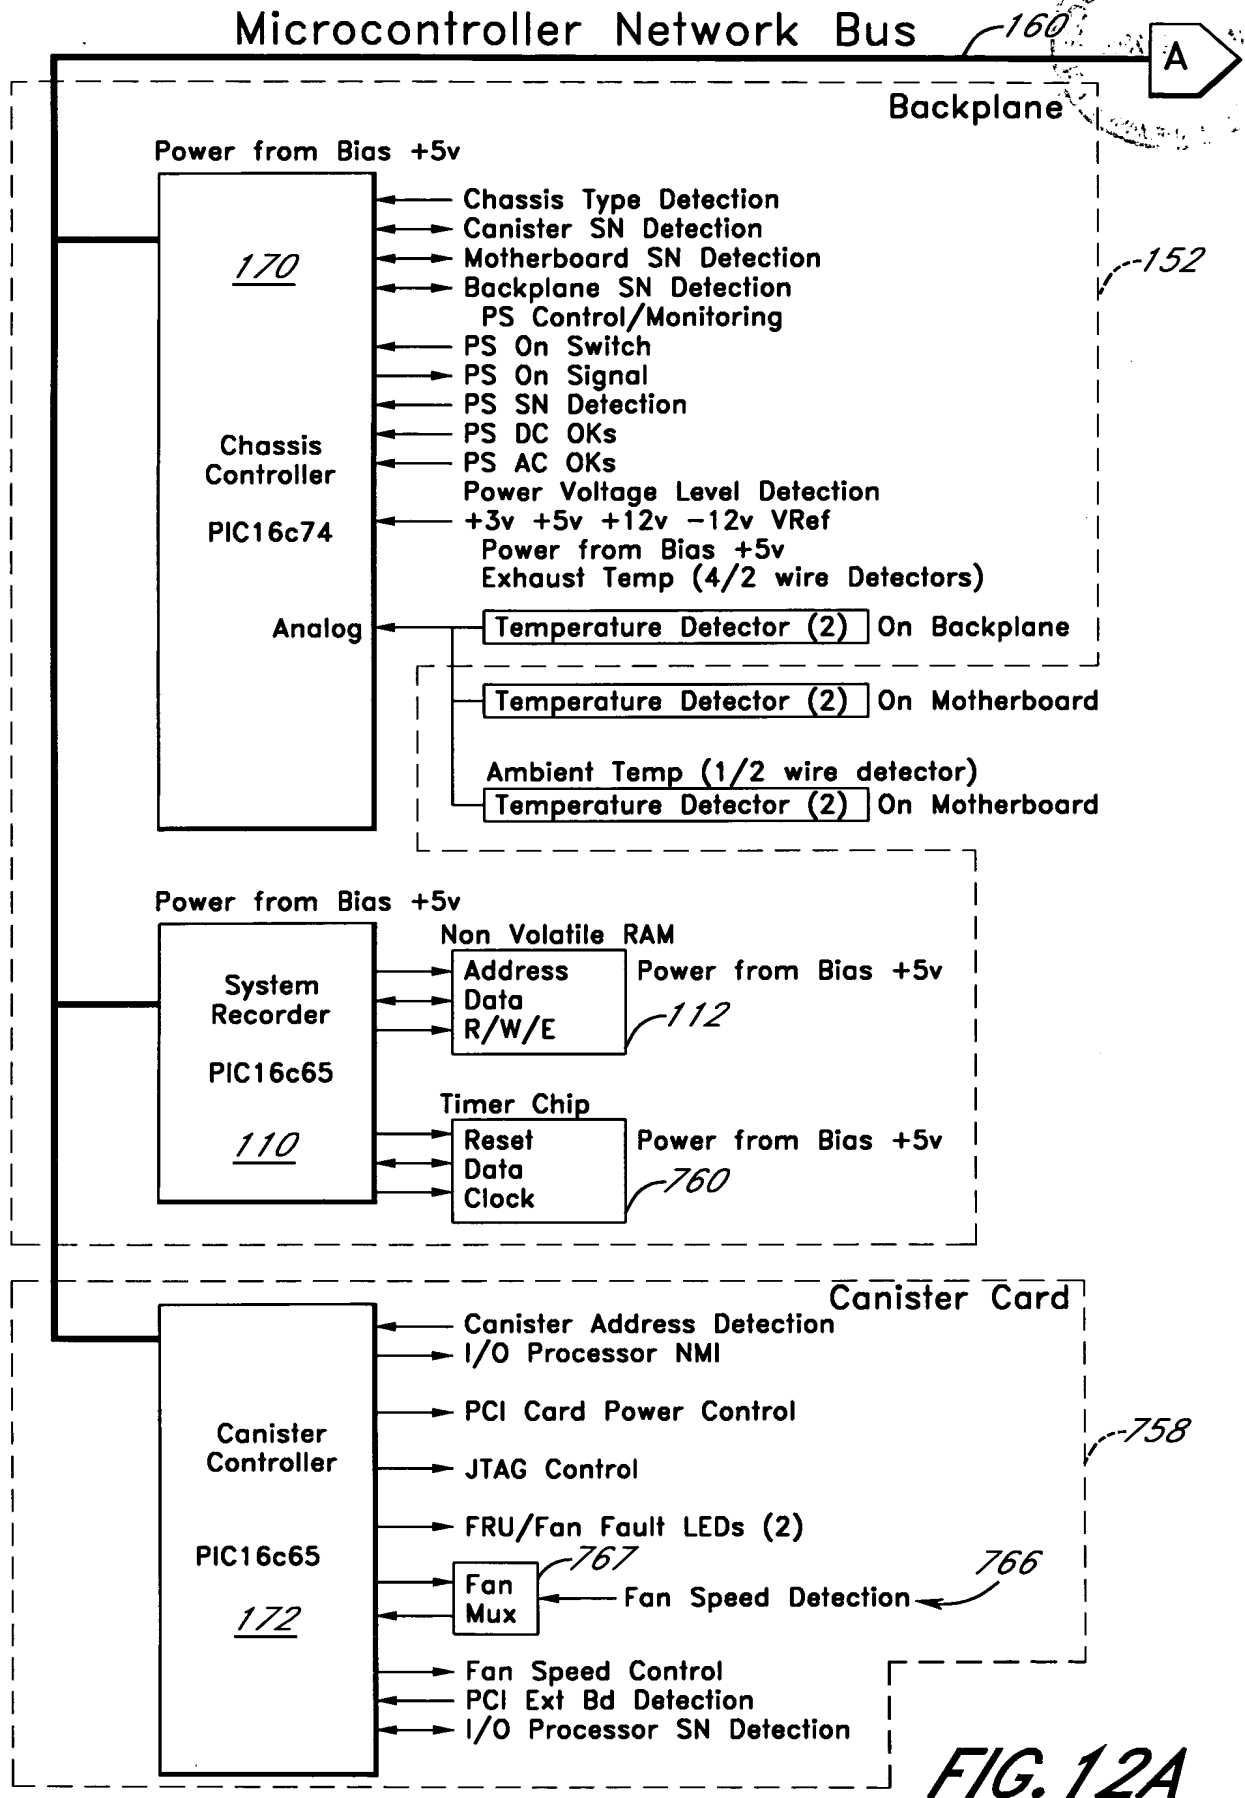

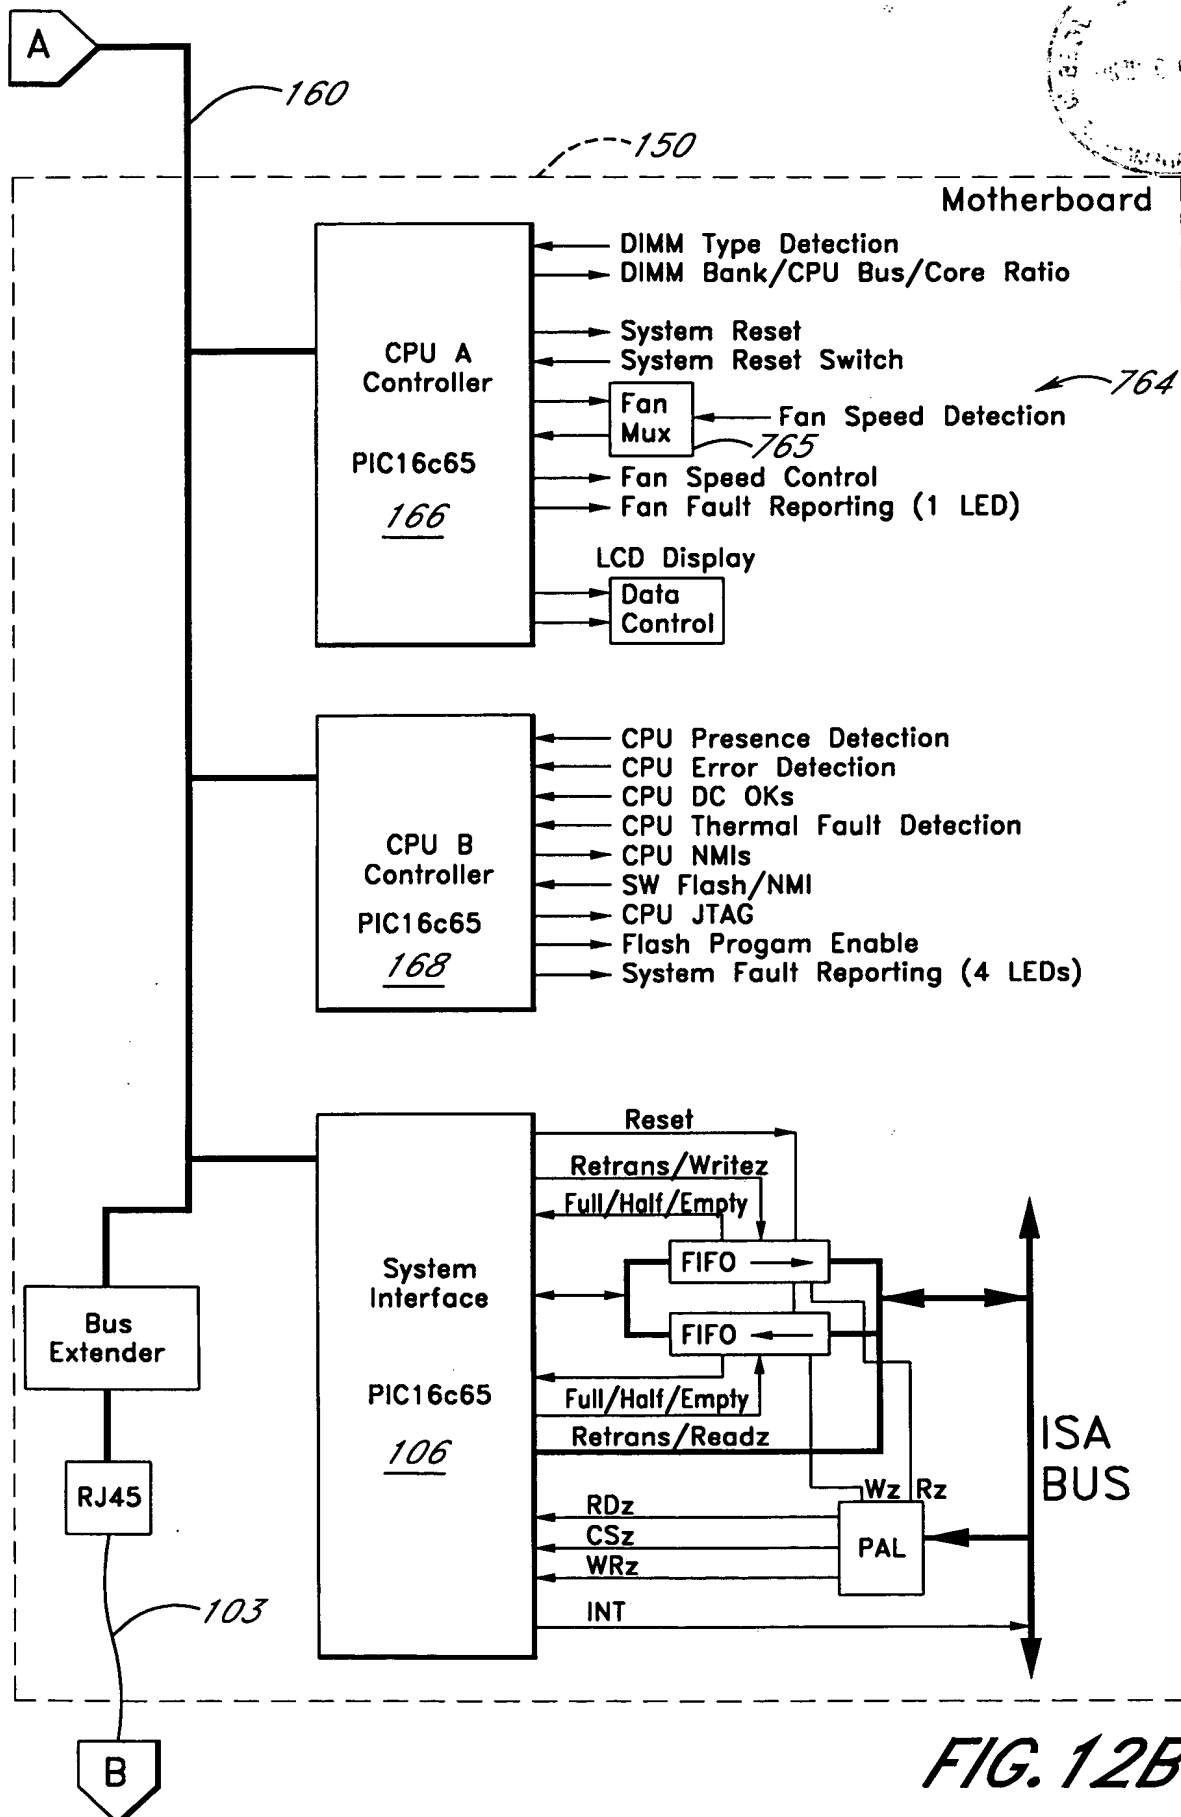

08/942,347

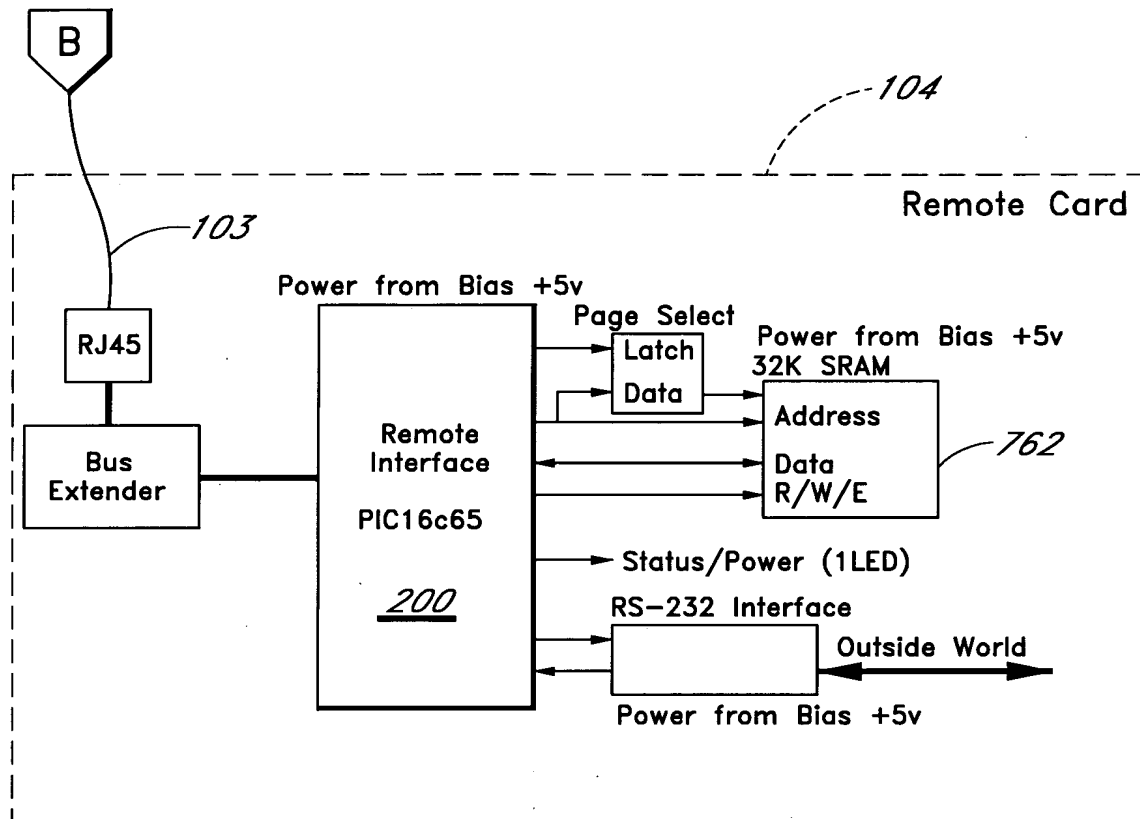 
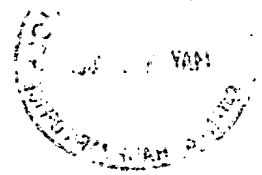 
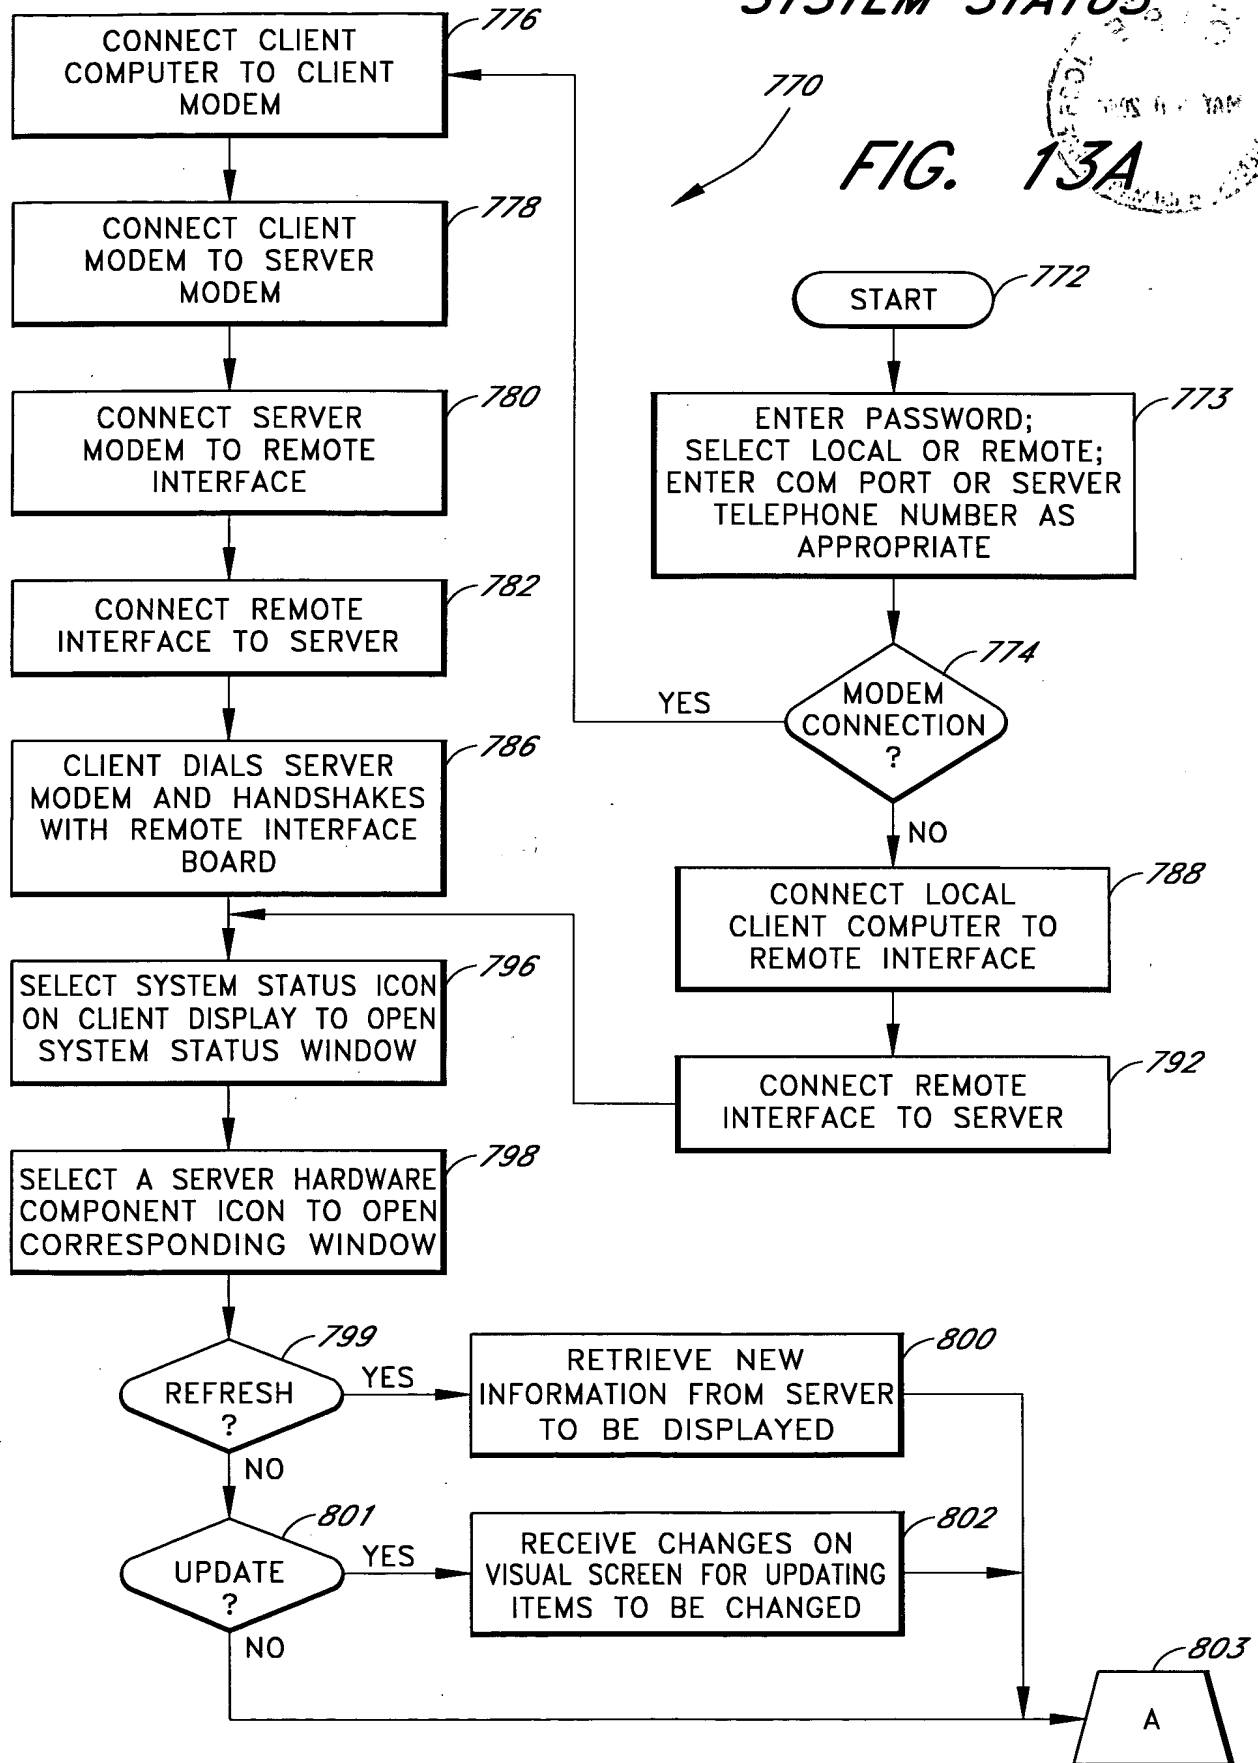 


FIG. 12C

08/942,347

# SYSTEM STATUS

FIG. 13A



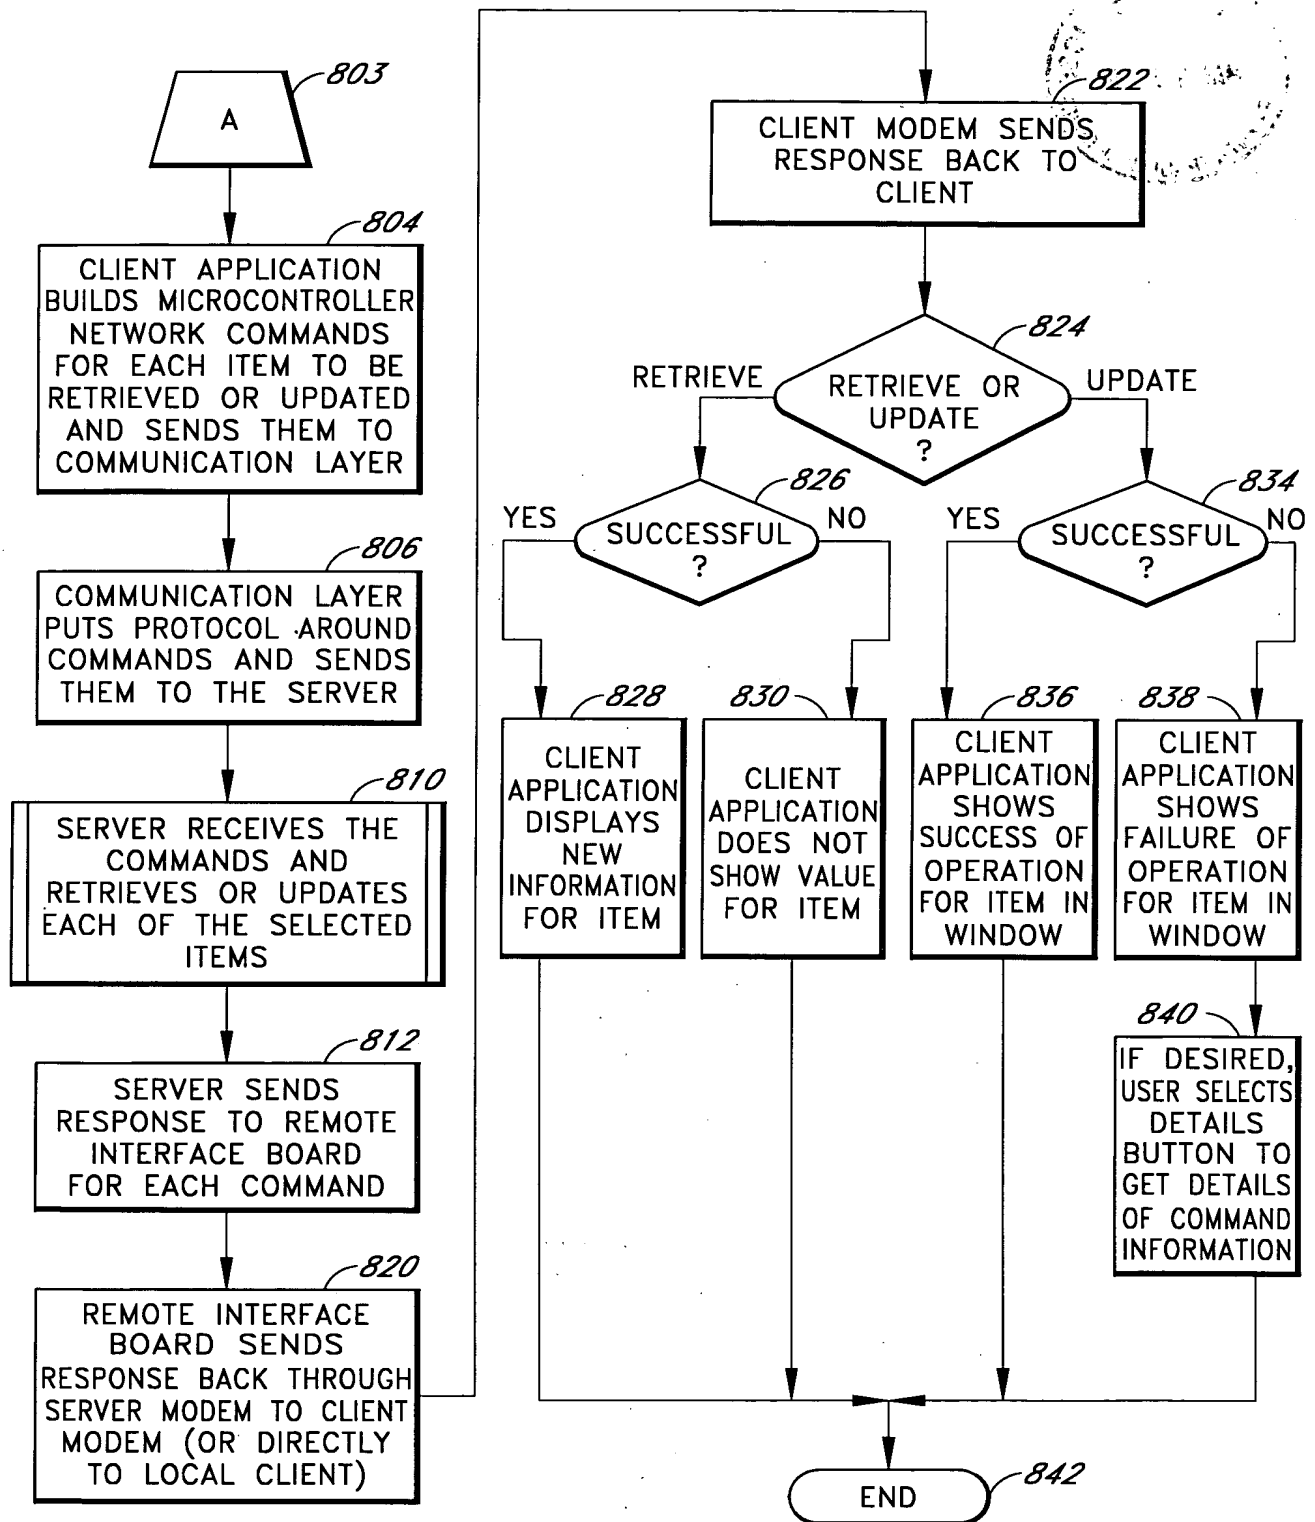 


FIG. 13B

08/942,347

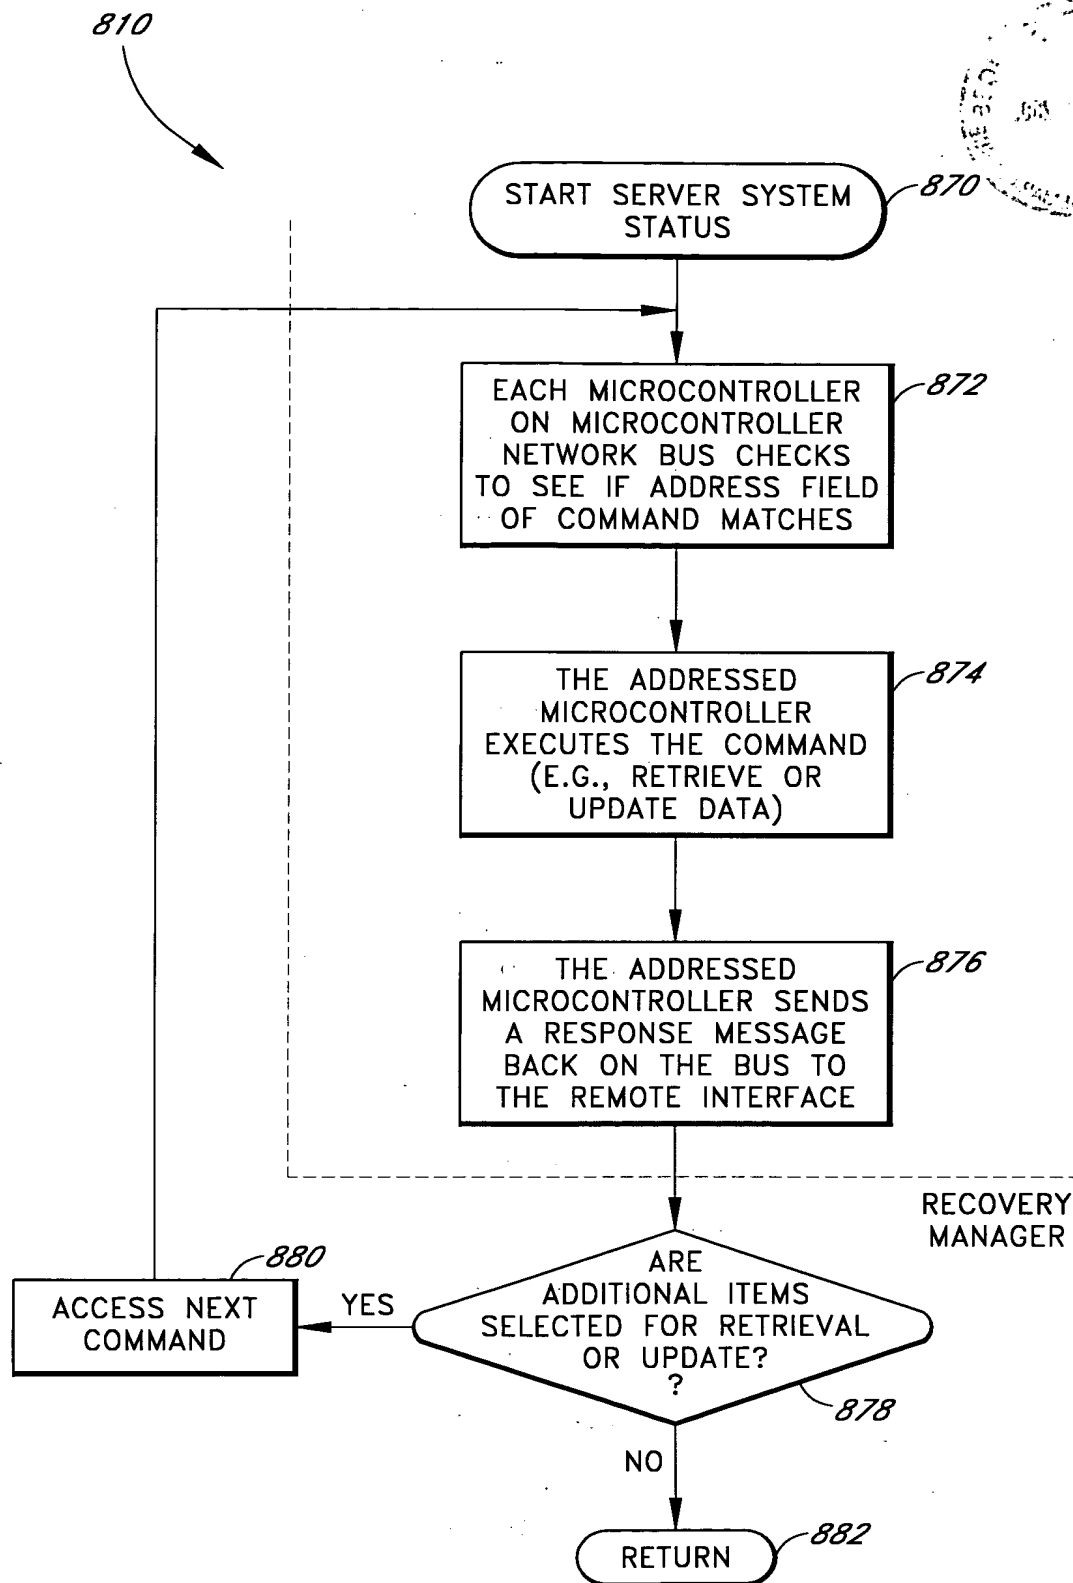 


FIG. 14

08/942,347

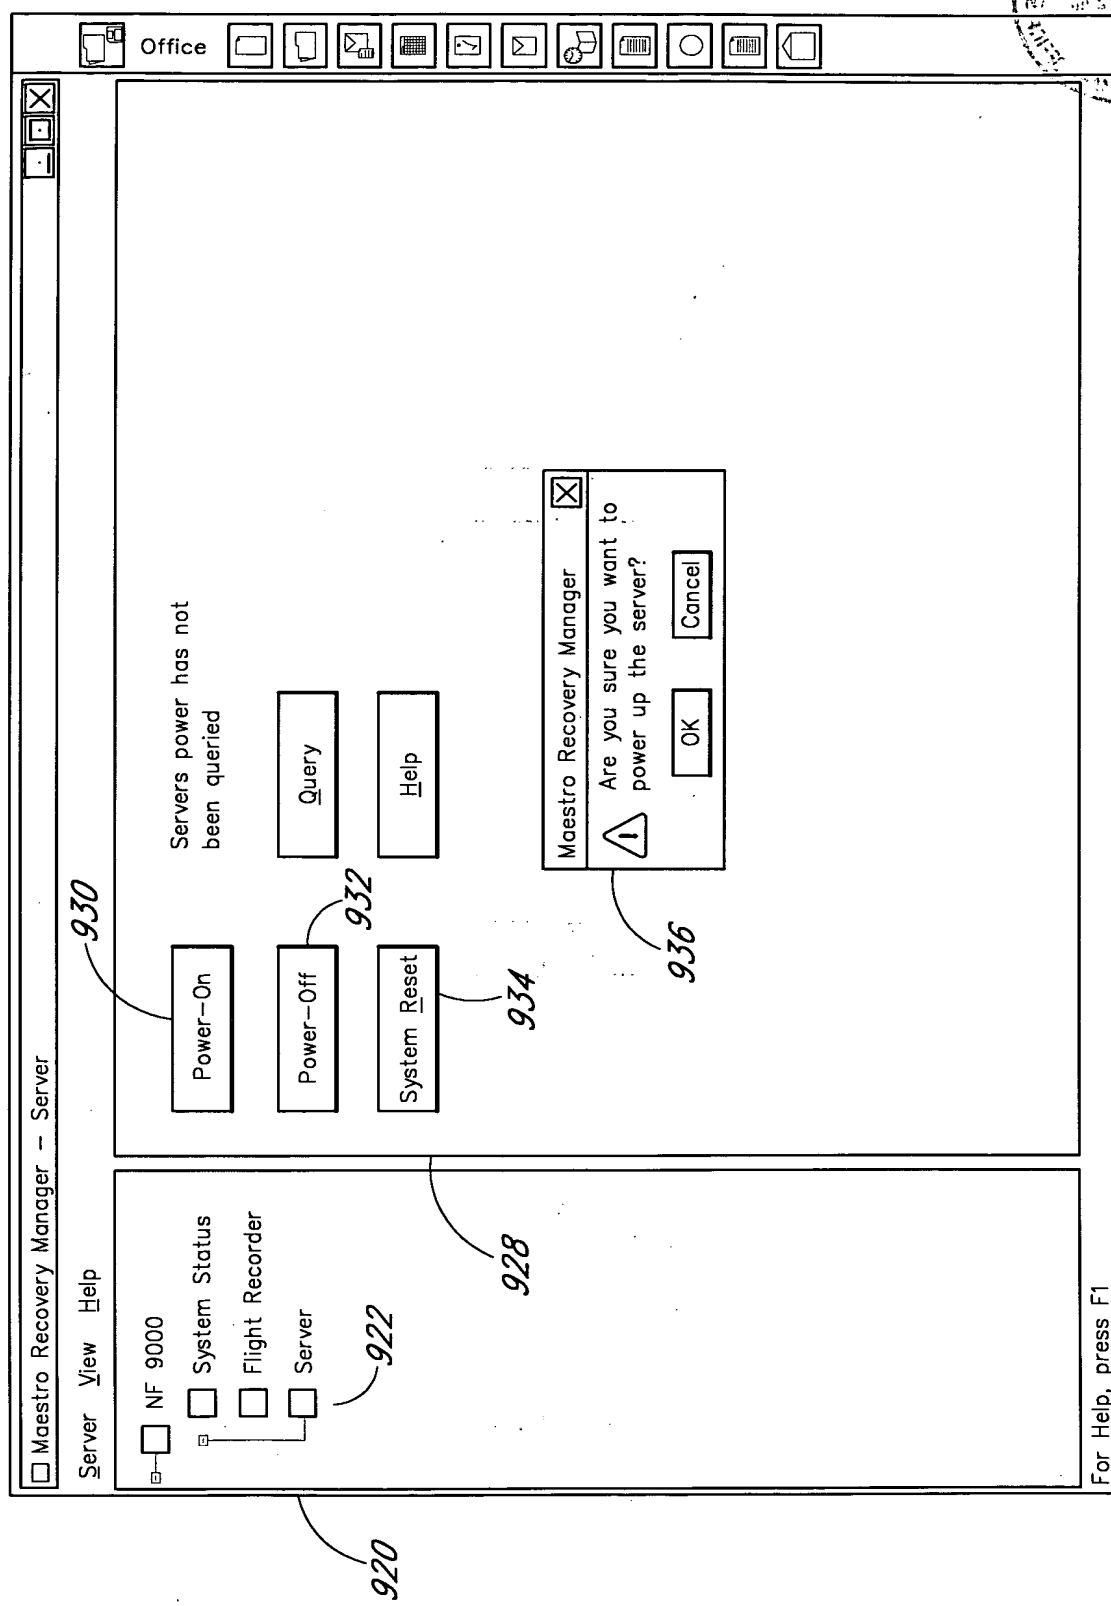 
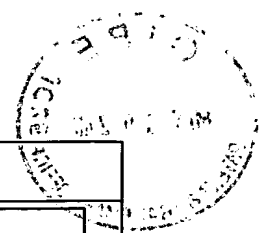 


FIG. 15

08/942,347

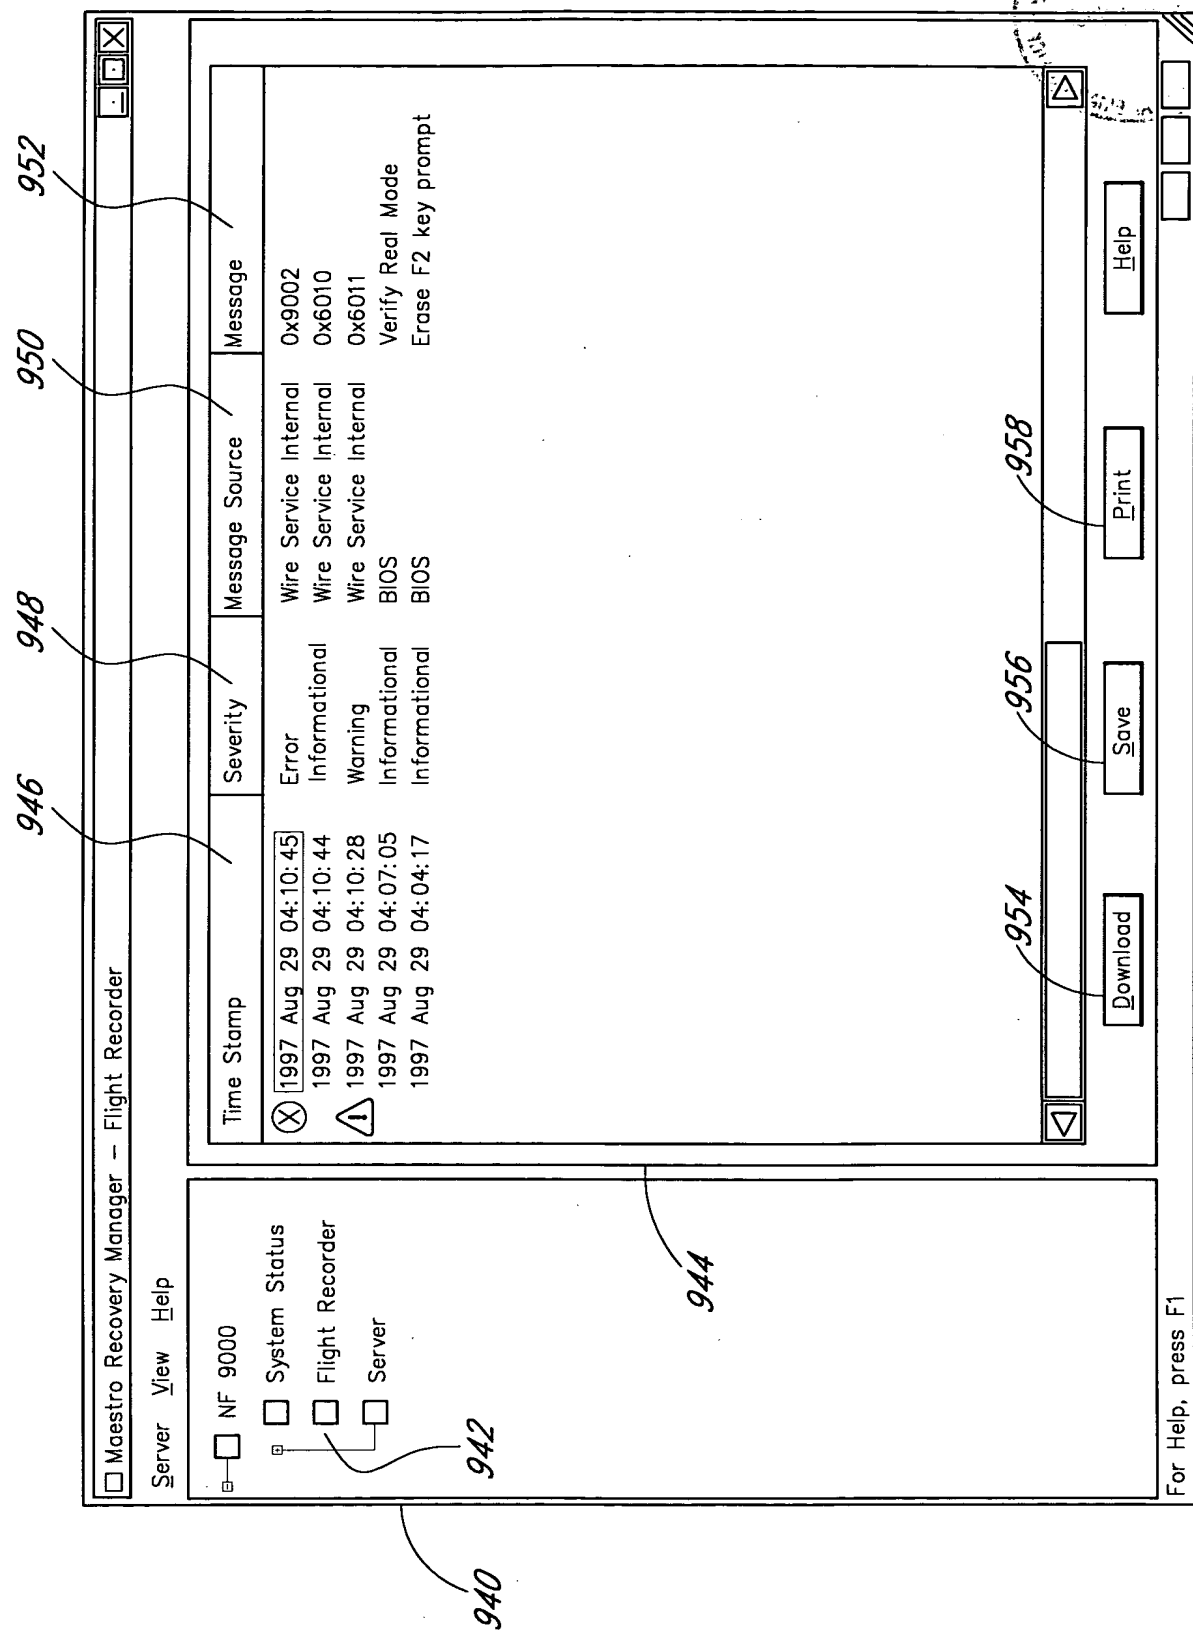 


FIG. 16

08/942,347

 
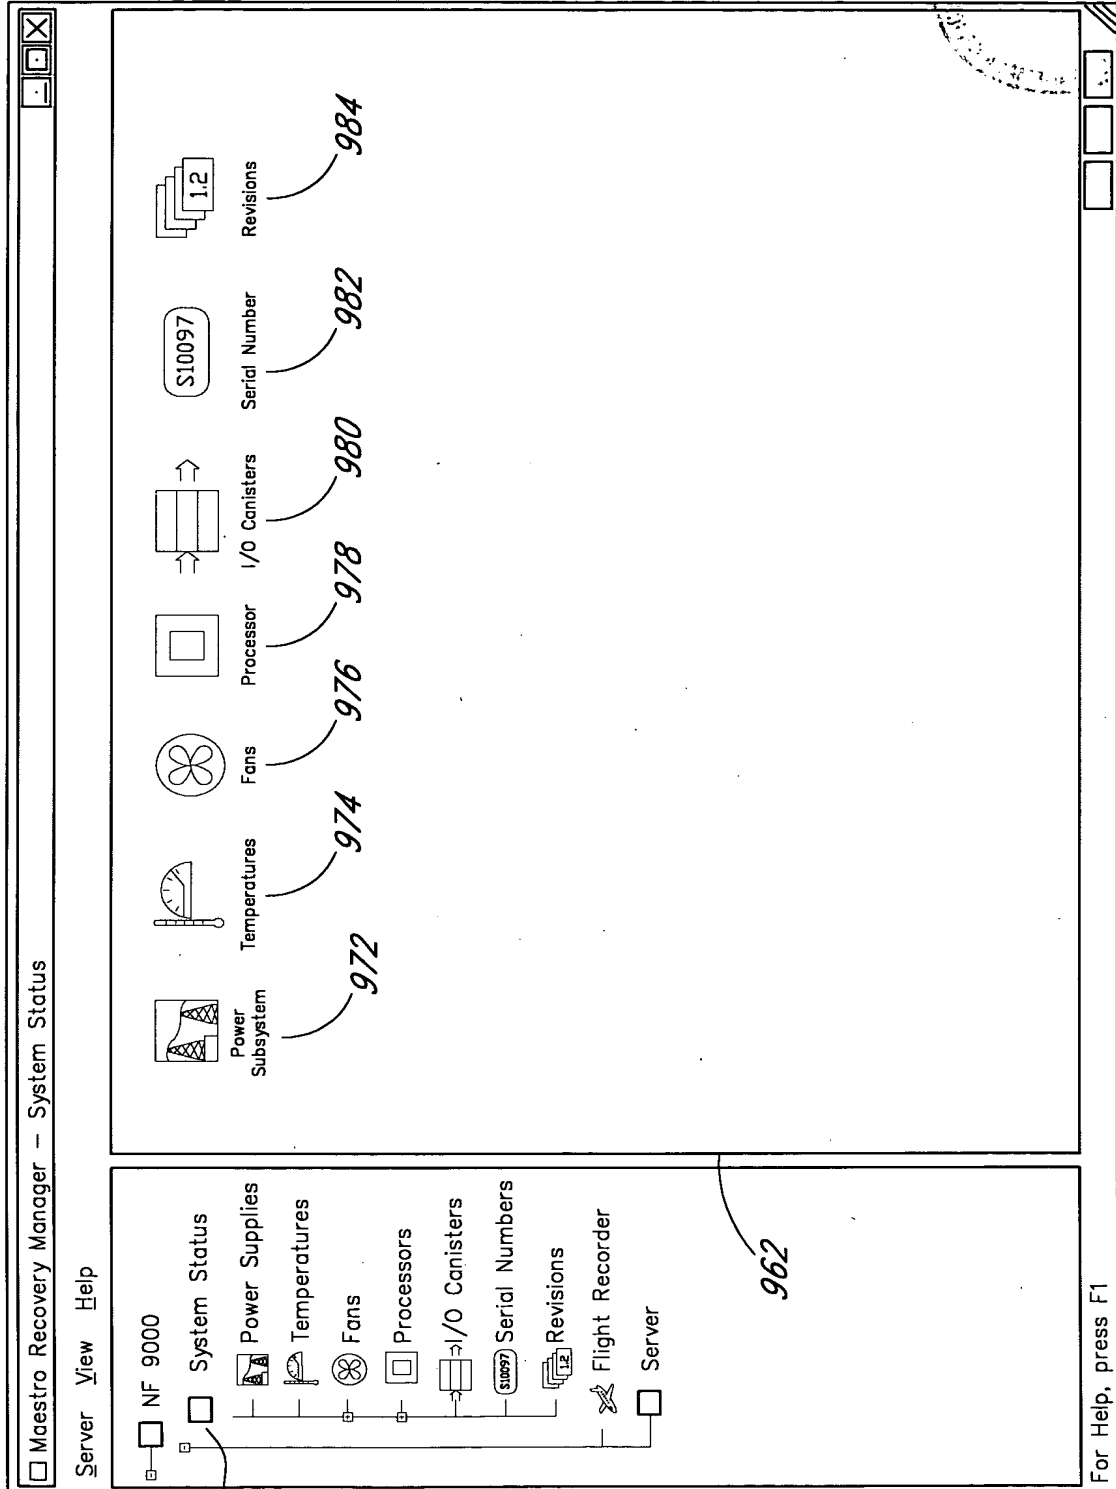 


FIG. 17



985 986 987 988 989 990 991

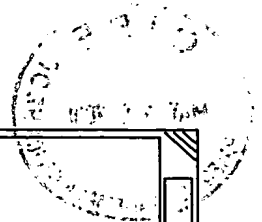

For Help, press F1

08/942,347

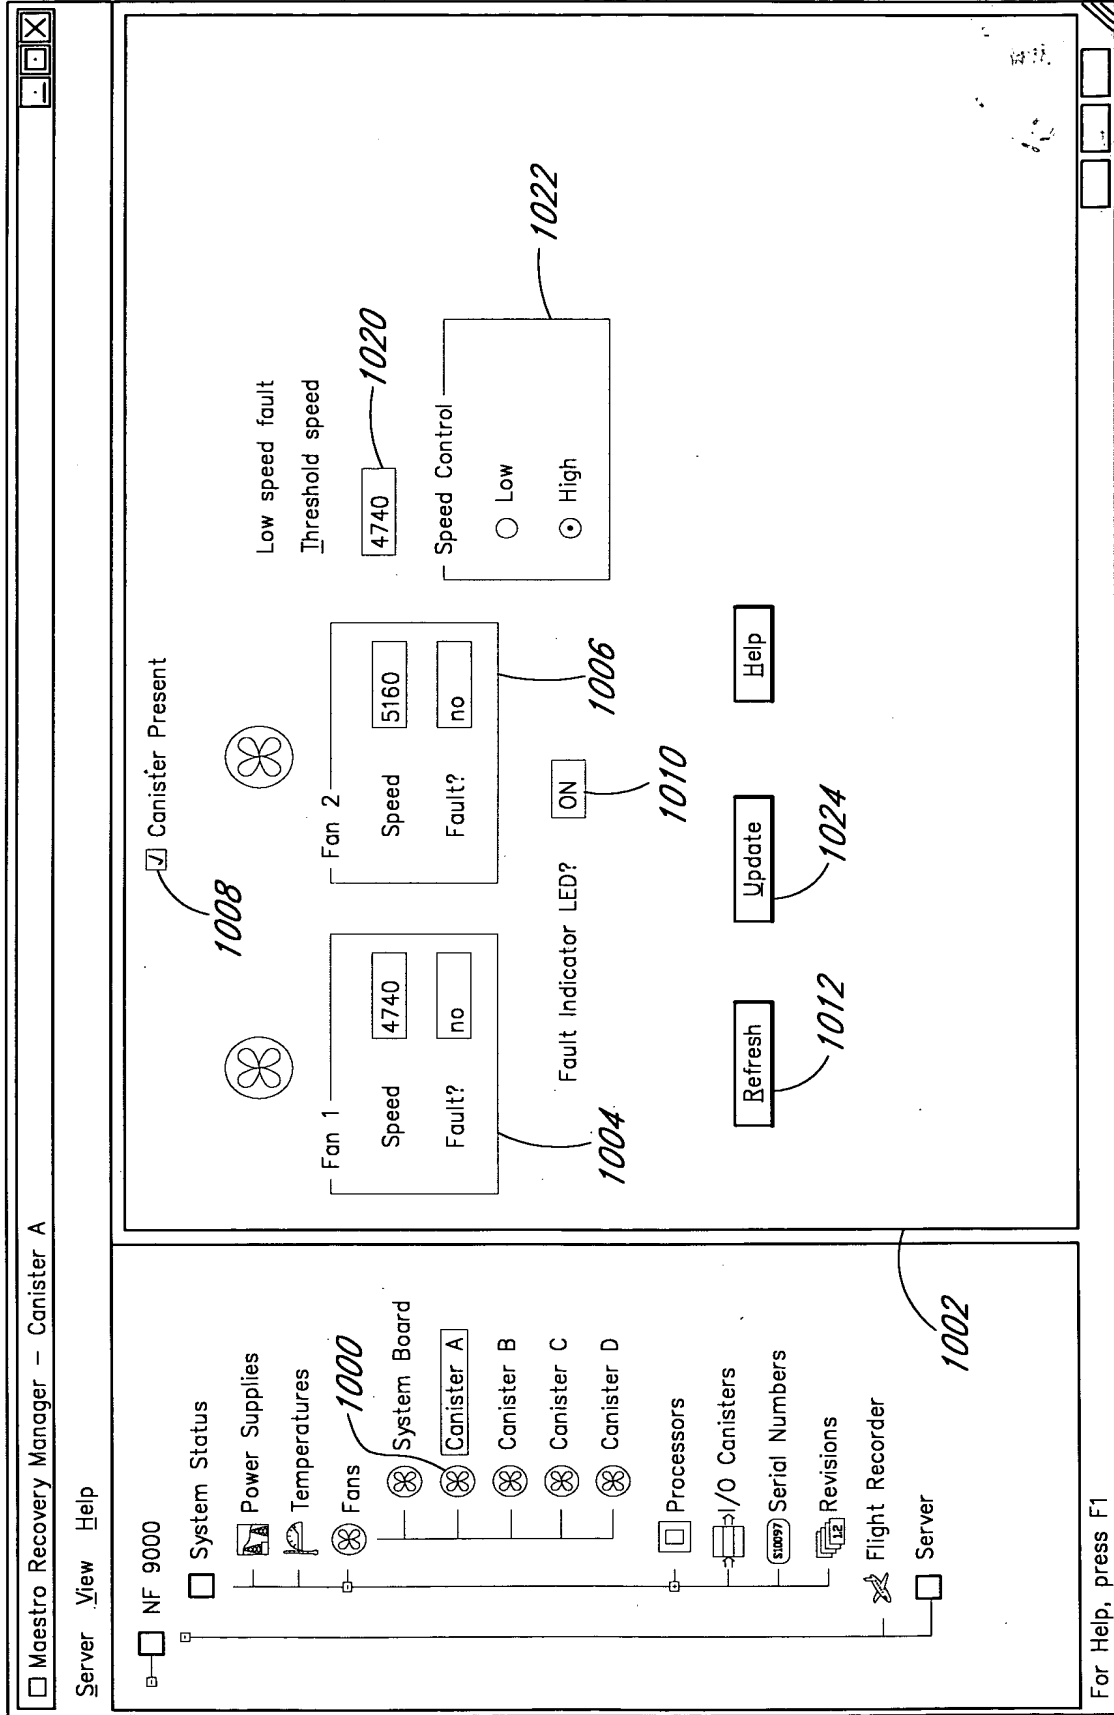 


FIG. 19